

The Ultimate Dvd Region Hack Guide Book



"Say Goodbye to region
protection"

Written By Antony Costa

October 5th 2004

Introduction

Hello and welcome to the guide, this e-book will guide you through the process of making your DVD player region free and could also help you

unlock hidden features within your DVD player. This could enable you to add SVCD and VCD functionality or even remove macro-vision.

What is region protection?

Because DVD is subject to the same issues of piracy and market sharing that govern the entire video industry, DVD region encoding was introduced to set geopolitical boundaries for compatibility of DVDs and players. For instance, a DVD encoded for Region 1 can only be played on a Region 1 (U.S. and Canada) DVD player.

Currently there are six global DVD regions, and DVD manufacturers can encode their product to play in any combination of regions.

- **REGION 1 -- USA, Canada**
- **REGION 2 -- Japan, Europe, South Africa, Middle East, Greenland**
- **REGION 3 -- S.Korea, Taiwan, Hong Kong, Parts of South East Asia**
- **REGION 4 -- Australia, New Zealand, Latin America (including Mexico)**
- **REGION 5 -- Eastern Europe, Russia, India, Africa**
- **REGION 6 -- China**
- **REGION 0 or REGION ALL -- Discs are uncoded and can be played Worldwide, however, PAL discs must be played in a PAL-compatible unit and NTSC discs must be played in an NTSC-compatible unit.**

The end result is that DVDs encoded for regions other than Region 1 cannot be played on a region 1 DVD player, also, players marketed for other regions cannot play region 1-stamped DVDs. That is until now!

Can I remove region protection?

Most DVD Players can be made region free with a special code that is put in using your remote. Please note the E-book vendor or I cannot be held responsible for any damage caused by you attempting to make your DVD player region free.

Removing region protection

Please look for the manufacturer of your DVD player then simply find your model number and follow the instructions carefully.

<u>A-Trend</u>	<u>Ferguson</u>	<u>Prosonic</u>
<u>Acoustic</u>	<u>Goodmans</u>	<u>Pioneer</u>
<u>Afreey</u>	<u>Grundig</u>	<u>Redstar</u>
<u>Aiwa</u>	<u>Harman/Kardon</u>	<u>Reoc</u>
<u>Akai</u>	<u>Haus</u>	<u>Roadstar</u>
<u>Akura</u>	<u>Himage</u>	<u>Ronin</u>
<u>Alba</u>	<u>Hitachi</u>	<u>Rowa</u>
<u>Apex</u>	<u>Hoyo</u>	<u>Samsung</u>
<u>Arcam</u>	<u>Hyundai</u>	<u>Sampo</u>
<u>Aspire</u>	<u>Lasonic</u>	<u>Sanyo</u>
<u>Audiologic</u>	<u>Lecson</u>	<u>Schneider</u>
<u>Audiosonic</u>	<u>Lenoxx</u>	<u>SEG</u>
<u>Bluesky</u>	<u>LG</u>	<u>Sharp</u>
<u>Bose</u>	<u>Limit</u>	<u>Sherwood</u>
<u>Bush</u>	<u>Logix</u>	<u>SM Supervision</u>
<u>Cambridge</u>	<u>Lumatron</u>	<u>Sony</u>
<u>Celestion</u>	<u>Luxman</u>	<u>Sunstech</u>
<u>Compacks</u>	<u>Marantz</u>	<u>Tatung</u>
<u>Crown</u>	<u>Matsui</u>	<u>Teac</u>
<u>Cyberhome</u>	<u>Manhattan</u>	<u>Technika</u>
<u>Cyrus</u>	<u>Medion</u>	<u>Telefunken</u>
<u>Daewoo</u>	<u>Memorex</u>	<u>Tevion</u>
<u>Dalton</u>	<u>Mico</u>	<u>Thomson</u>
<u>Dansai</u>	<u>Minato</u>	<u>Tiny</u>
<u>Dantax</u>	<u>Mustek</u>	<u>Toshiba</u>
<u>Daytek</u>	<u>Nakamichi</u>	<u>United</u>
<u>Decca</u>	<u>Nakio</u>	<u>Veba</u>
<u>Denver</u>	<u>Narita</u>	<u>Venturer</u>
<u>Diamond</u>	<u>NAD</u>	<u>Welltech</u>
<u>Digitor</u>	<u>NEC</u>	<u>Wharfedale</u>
<u>Digitrex</u>	<u>Norcent</u>	<u>Xenius</u>
<u>Digitron</u>	<u>Pacific</u>	<u>XMS</u>
<u>Digix Media</u>	<u>Panasonic</u>	<u>Yamada</u>
<u>DM Tech</u>	<u>Philco</u>	<u>Yamaha</u>
<u>Finlux</u>	<u>Philips</u>	<u>Yukai</u>
<u>Fisher</u>	<u>Proline</u>	<u>Zenith</u>
<u>Eltax</u>		

A-Trend

AD-L528

To convert this player into a multiregion DVD player please follow these simple instructions (assume you are using the remote control unless otherwise stated):

- Switch on the player making sure no disc is present
- Press Pause on the remote
- Press: 3, 1, 4, 1, 5 and 9 on the remote
- Press the region number, 0 for multiregion
- Press Pause
- Turn the unit off then back on and you're good to go

Alternative

- Switch on the DVD player
- Press 'stop' on the remote
- Press '1', '9', '9', '9' then 'Enter'
- The region menu appears
- Select 'All' to make the player multi-region

Having Problems?

Although we take every care to ensure that the hacks supplied here are correct, mistakes can be made. If the above hack does not work at first, please firstly ensure that you have followed the instructions exactly. Try repeating the process a couple of times.

Helios

To convert this player into a multiregion DVD player please follow these simple instructions (assume you are using the remote control unless otherwise stated):

- Open the disc tray
- Press Setup, 1, 9 and 9 on the remote
- Select the region

Having Problems?

Although we take every care to ensure that the hacks supplied here are correct, mistakes can be made. If the above hack does not work at first, please firstly ensure that you have followed the instructions exactly. Try repeating the process a couple of times.

LE-511

To convert this player into a multiregion DVD player please follow these simple instructions (assume you are using the remote control unless otherwise stated):

- Switch on player
- Press: Stop, 1, 9, 9, 9
- Hidden menu appears
- Set the "Zone" field to All or a specific region

Having Problems?

Although we take every care to ensure that the hacks supplied here are correct, mistakes can be made. If the above hack does not work at first, please firstly ensure that you have followed the instructions exactly. Try repeating the process a couple of times.

Acoustic Solutions

DDVD-150, DVD-321 DVD-421, DVD-451

Multi-Region:

- **Open** the tray
- Press the **Setup** button on the remote
- Press **Next**, **Prev**, **Next** and **Prev**
- Enter the region code set-up
- Using the **Left** and **Right** buttons set **Ver** to **255** for region free or **1** for region 1, **2** for region 2 and so on

VCD Hack:

- Repeat the above operation but instead of entering the region code set-up press the **Down** button three times
- Using the **Left** and **Right** buttons set **Ver** to **5000** to play VCDs or SVCDs

DVD-521, DVD-551

Multi-Region:

- Press the **Setup** button on the remote
- Press **Next**, **Pause/Step**, **Prev** and **Next**
- You should now be in a service menu where you can set the region to **1-8**, or **Bypass** for Region free. Note that *Bypass* will not play RCE discs.

DVD-651

Multi-Region:

- Power **On** and **Open** the tray
- Using the remote press **Setup**, **Next**, **Prev**, **Next** and **Prev**
- Enter the region code set-up
- You can now press **Up** and **Down** to go through several options
- Each option has a range of numeric values access by pressing **Left** or **Right**. When you're finished, press **Setup**. Each option is shown with the prefix **VER**.

VER 1 = Region 1

VER 2 = Region 2

VER 3 = Region 3

VER 4 = Region 4

VER 5 = Region 5

VER 255 = Multi Region

VER 3001 = Parental Control Enable

VER 3000 = Parental Control Disable

VER 4001 = Macrovision Enable

VER 4000 = Macrovision Disable

VER 5001 = VCD and DVDR disable

VER 5000 = VCD and DVDR enable

AXDVD-2000

Multi-Region:

- Power **On** and then using the remote
- Press **Set-up**
- Press **1, 3, 6, 9, 8, 8, 8** and **8**
- Scroll **Down** to version
- Press **Play**
- Scroll **Up** or **Down**
- Press **Set-up**

Afreey

PDV-2000, ADV-2360

Multi-Region:

The procedure must be done **WITHOUT** a disc in the player:

- Turn **On** the player **WITHOUT** a disc in the player
- Press **Setup** on the Remote
- In the Setup menu, press in sequence the following buttons: **Sub-T**, **Zoom**, **Prev** and **Next**. Then on the top of the screen you will see "XX1XX"
- With the arrows on the remote, press **Left** or **Right** to change until the desired region number appears
- After you have selected the Region, press **Setup** to go back to the main screen

LD-2020. LD-2060

Multi-Region:

- Press the **Setup** button on your remote control
- Using the onscreen menu, select the **Preferences** option
- Press the **Still/Step** button on your remote control
- Press the **Prev** button on your remote control
- Press the **Next** button on your remote control
- You will now enter the hidden setup page, and can change the player to any region or set it to region free. You can also disable Macrovision from this menu

This hack may not work on all versions of firmware. Try this hack if you have a machine that the above fails on:

- Press the **Setup** button on the Remote Control
- Key in the numbers **3, 8, 8, 8** and **3** from your Remote Control
- Use the **Arrow keys** to change between regions or select **Bypass All**

Aiwa

XD-DW1, XD-DW5, XD-DW7

Multi-Region:

- Power **On** the player and insert a disc into the unit
- **Close** and then **Open** the lid
- Quickly press the **Stop** button a wait a moment
- Using the remote press **8, 7, 2, 0** and then **1** for region one, **2** for region two, and so on, or **>>** for region free.(Note: RCE discs will require specific region set)

If the above fails to work then repeat the above but on last step enter:-

- Using the remote press **8, 7, 1, 0** and then **1** for region one, **2** for region two, and so on, or **>>** for region free

XD-DV170, HT-DV50

Multi-Region:

- Press the **Power** button on the player to turn the unit **Off**
- Press and hold the **Top Menu, Menu** and **OSD** buttons on the unit until the word **Factory** appears on the LCD display
- Press the **Power** button on the player to turn the unit off
- Insert any disc and power the player **On**

If the above does not work

- Press the **Power** button on the player to turn the unit off
- Press and hold the **Top Menu, Menu** and **OSD** buttons on the unit until the word **Factory** appears on the LCD display
- Quickly press the **Power** button on the player to turn the unit on

XD-DV290, XR-DV370KR

Multi-Region:

- Press the **Pause** button on your Remote Control
- Using your Remote Control enter the code **3, 1, 4, 1, 5** and **9**
- Press the **0** button on your Remote for Region free, **1** for Region 1 or **2** for Region 2 (Note: RCE discs will require specific region set)
- Press the **Pause** button on your remote control
- Power off your player and wait a few seconds
- Power on your player

If the above fails to work then you may wish to try:-

- Power **On** the player with no disc inserted

- Wait for the "No Disc" message on screen
- Using the remote press **Pause**
- Using your Remote Control enter the code **3, 1, 4, 1, 5** and **9**
- Press the **0** button on your Remote for Region free, **1** for Region 1 or **2** for Region 2 (Note: RCE discs will require specific region set)
- Press **Pause**
- Power **Off** the player for a few seconds and power back **On**

To view the firmware version of this player:

- Press the **Setup** button on the Remote Control
- Select **TV Aspect** and place the cursor on the **16:9 Wide** option
- Using the Remote Control enter the code **1, 3, 9, 7, 1, 3** and **9**
- Press the **Enter** button
- You should now see the version information screen
- Pressing **Setup** button on the Remote Control to exit this info screen

XD-DV480

Multi-Region:

Converting the player to an alternative region:

- Supply power to the unit and power on from standby mode via the remote
- Wait until **No Disc** is indicated on the fascia
- Now press **Pause** followed by **3, 4, 2, 2, 9** and then **2**
- The display should now read **CODE**
- Now press **0, 0** for region free or **0** then **1** for region one, **2** for region two, and so on (Note: RCE discs will require specific region set)

If the above modification fails to work then the alternative method below may work:-

- Connect the DVD player
- Use the **Remote Control** to turn power on
- Wait until **No Disc** appears
- Press **Pause** and type the following code, **8, 9, 2, 6**, the display will show "**CODE__**"
- Within 5 seconds press **00** for all regions
- Press **Pause** and **Power**

XD-520KS

Multi-Region:

- Turn **On** player
- **Open** the disc tray and make sure its empty.
- Make sure you can see the DVD on your TV screen
- Press **Menu** on remote (not top menu) you should see the on screen pictorial graphics on your TV screen.
- Using the remote, press **1, 6** and **7**
- On the screen you should see over the top of the graphics "region 1-6"
- Press **Mute** on the remote and next to "region 1-6" you should see "all"
- Power **Off** player via remote and the DVD should close the tray.
- Re start the unit, put in a region disc and it should play

Multi-Region:

- Press the **DVD/CD** button on the remote control
- Press the **Open** button on the remote control to open the drive tray
- Using the remote control, press the buttons **C, 2, 5, 8, 0** and **C**
- The word **TESTMODE** should appear on the DVD display, and the onscreen display should indicate the current region setting
- Press the **Up Arrow** on your remote control until **14 02** is shown on the onscreen display. Note: The **02** indicates the current region and may be different depending on what your player is currently set to
- Using the remote control, press the buttons **1** and then **4**, then enter **0** and **0** for multi-region, or **0** and **1** for region 1, or **0** and **2** for region 2, and so on
- Press the **Enter** button on the remote control
- Press the **Return** button on the remote control
- The word **TESTMODE** should appear on the DVD display
- Press the **C** button on your remote control
- A message should be displayed stating **EEP CLR** followed by **EEP ERR**
- Place your DVD in the drive tray
- Press the **Return** button on the remote control

HT-DM150

Multi-Region:

First completely power off the played and unplug from mains for 30 seconds, this clears anything in players RAM memory. Plug the unit back into mains then follow steps below:-

- Turn power **On** with no disc in the tray
- Press **Enter**
- Press **8, 4, 2, 6, 9**
- Press **Enter**
- Tray should **Open**
- Tray will **Close** and DVD will power **Off**

- Turn on DVD from remote and it is now Region FREE

Akai

DVP-1000

NOTE: Be VERY VERY careful when changing the settings below, you can do a lot of harm if codes are set wrongly. There are no known codes/combinations to rectify problems or reset the player.

Multi-Region:

Converting the player to a different region:

- Press the **On/Off** button on the player to turn it off.
- Press and hold the buttons **Eject** and **A-B** together, and then press the **On/Off** button on the player to turn it back on.
- When the text **A:00 D:12** appears on the units display, release the **Eject** and **A-B** buttons.
- By pressing the **Play** button to increase, and the **Stop** button to decrease, change the value of **A** until it reads **A:05**.
- By pressing the **Skip-Forward** button to increase, and the **Skip-Backward** button to decrease, change the value of **D** until it reads **D:00** for region free, **D:01** for Region 1 or **D:02** for Region 2, depending on your requirement.
- Press the **On/Off** button on the player to turn it off.

Press the **On/Off** button on the player to turn it on.

DVP-2000

NOTE: Whilst most movies will play with the region set to 0, some Region 1 titles require you to select that zone before they will play.

Multi-Region:

Converting the player to an alternative region:

- Press the **On/Off** button on the player to turn it off .
- Press and hold the buttons **Fast Forward** and **Stop** together with the **black button** located on the right hand underside of the machine, and then press the **On/Off** button on the player to turn it back on.
- When the Akai logo appears, release the **Fast Forward** and **Stop** buttons but keep holding the **Black button** on the underside of the player.

- A list of numbers will appear in columns. Press the **Enter** button once on your remote control, the second column of numbers should now be selected.
- Press the **Cursor Right** button on your remote control to select the second number. Change this to **00** for region free, **01** for Region 1 and **02** for Region 2.
- Press the **Enter** button once on your remote control to confirm the region change.
- Press the **On/Off** button on the player to turn it off, then release the **Black button** on the underside of the player.
- Press the **On/Off** button on the player to turn it on.

DVP-2500

Multi-Region:

- Turn the player **On**
- **Open** the players drawer
- Enter **8, 9, 2, 6** on the remote followed by **0**

DVP-3410

Multi-Region:

- Press **Open** button on the remote to open the drive tray
- Press **8, 4, 2** and **1** keys on the remote
- A service menu will appear
- Use cursor keys to switch to region or Macrovision and press **Select**
- Press **1** for region 1, **2** for region 2, and so on or **9** for multi-region playback

DVP-4000

NOTE: Whilst most movies will play with the region set to 0, some Region 1 titles require you to select that zone before they will play.

Multi-Region:

- Switch the power **Off**, press the **Dimmer Switch** & the **Back Skip** buttons at the same time.
- **Still** holding the keys down, power the machine **On**.
- Four Lines appear on the front panel display. Using the remote control, press **1999** using the numerical keys.
- The display will change to **A-0000 D-04** (Region 3 at this stage)
- Set Region code using the following:-

REGION CODE		DISPLAY
0	"00"	A-0000 D-00
1	"01"	A-0000 D-01
2	"02"	A-0000 D-02
3	"04"	A-0000 D-04
4	"08"	A-0000 D-08

- Push the **Enter** key on the remote.
- Turn **Off** the unit using the **On/Off** switch, **not** Standby.
- The next time you turn on the unit, the region should be set.

DVP-4500

Multi-Region:

- Connect the machine to the mains but **do not** power on, also ensure there is no disc inserted
- Press and hold down both the **Dimmer** and **Reverse Skip** buttons on the front panel and then press the Power ON
- The display should show "NAKAMICHI"
- Hold the **Dimmer & Reverse Skip** buttons for a few seconds and the Display should change to "____ _" from "NAKAMICHI". Wait for a minimum of 5 seconds (at this stage you're **not** pushing the **Dimmer & Reverse Skip** buttons any longer), then using the handset's numerical keys press **1, 9, 9, 9**
- The display should now show: **A-00 D-??**, Where D-?? indicates the present region
- To change the region code, punch in the new code (i.e. 01 for Region 1, 03 for Region 3, etc.) and after that press the **Enter** button (located next to the numbers keypad on the Handset). The display should now change (slowly) to D-01 (or whichever new region you have assigned to, as above)
- Completely Power **Off** and the machine is set to the new Region.

Note: This also works as a region **0** hack, but be aware that some discs may refuse to play unless the region you have selected matches the region of the disc. The hack is also indefinite and has no limited lifespan, and can therefore be performed as many time as required

DVP-8000

Multi-Region:

- Turn the player **On** and ensure there is no disc in the draw
- On the remote key in **8, 9, 2, 6** plus the region number
- For region free **8, 9, 2, 6** followed by **0**

DVR-2100SS

Multi-Region:

- Power on the player and Open the tray
- Press 3, 8, 3 and 8 on the remote control
- A menu will then appear at the top of the screen
- Press Enter until the desired region is displayed
- Press 1 to clear the menu

DHT-300

Multi-Region:

- Eject DVD disc from the unit and **Close** with no disc
- In status of **No Disc**, press **Stop** button on the remote
- Using the numeric buttons on the remote press **1, 9, 9** and **9**
- A Menu is shown with the current region code
- Move the cursor to **Region code** and press **Enter**
- Then set the region code to **Free** by using arrow **Up/Down** key on the remote and press **Enter** again
- Press **Setup** button on the remote

HV-DH10, HV-DH10N

Multi-Region:

- Power **On** player and insert a disc
- Wait for message "Check region code" to appear
- Using a remote control press **Display**, **Top Menu** and **Play** quickly. If it does not work try pressing **Disk Menu** instead of **Top Menu**

Akura

ADV-145S, ADV-147AS

Multi-Region:

- Power **On** without a disc in the player
- Press the **Setup** key on the remote
- Press **Vol+**, **Vol-**, **Vol+** and **Vol-** (these are the buttons marked + & - that are under the audio key on the remote)
- This will then display region number on top right of screen
- Use the **Right** arrow key until **255** is displayed (the numbers **1** to **6** are the different regions and **255** is multi region)
- Press **Setup** to exit
- Your player is now region free

Alba

DVD-45

Multi-Region:

- Turn **On** player
- **Open** disc tray either using the **Eject** on the player or **Open** on the remote
- Press **2**, **8**, **1** and **2**
- A menu should pop up, press **Enter** until **9** appears
- DVD player is now region-free

DVD-59

Multi-Region:

- Power **On** player
- Press **Open/Close** on remote
- Press **Prog** once
- Press **Enter Three** times
- Region should be displayed on the Screen
- Use **Up** or **Down** keys until **0** is selected then press **Stop** on the Remote which will confirm the change. **0** is region Free or you can select **1 - 6** instead if you only want it for a specific region only.
- Press **Open/Close** or **Stop** on the remote to exit

DVD-103

Multi-Region:

- Power **On** player
- Press **Pause** on the Remote
- Enter code **3, 1, 4, 1, 5** and **9**
- The player display should read "**COdE - -**"
- Enter the desired Region (**0** = all, **1** = Region 1, **2** = Region 2 etc.)
- Press **Pause** again
- Power off player
- Wait **10** seconds and then power **On** again

DVD-104

Multi-Region:

- Press **Open/Close** to open the players tray
- From the Remote key in **3, 3, 0, 8** and **8**
- Now press **1** for Region 1, **2** for Region 2 and so on. For region free press **0**
- Press **Open/Close**

DVD-106

Multi-Region:

- Using the remote press **3, 1, 4, 1, 5** and **9**
- The display on the fascia should now show "**COdE--**"
- Now press **1** for Region 1, **2** for Region 2 and so on. For region free press **0**
- **Press Pause on the remote and power the player Off**
- **Wait 10 seconds before powering the player back On**

DVD-108

Beware: UK retailer Argos are selling the Alba 108xi which looks similar, but alias, is not multi-region out of the box. However, we do have the code for the **XI** listed below.

Multi-Region:

- This player should be region free straight from the box

If you are still unable to play no home region discs then try the following:-

- Press **PAL/NTSC**
- Press **Menu**
- Press **0**

VCD Hack:

- **Open** the tray
- Press **2, 8, 1, 2** and **Enter**
- A service menu will appear
- Push in the tray with VCD on board
- Wait a second and the **Stop** icon appears on top left of screen
- Press **1** and VCD will play

DVD-108XI

Multi-Region:

- Power **On** the unit and **Open** the tray
- Press the **Setup** button
- Use the **Right** key until you highlight the **Custom** menu
- Press **3, 3, 3** and **3**
- A service menu will then be displayed
- Use the direction keys to select the region region and then press **Enter**

DVD-109

Multi-Region:

- Insert a region **1** disc and press **Play**
- The Message "Wrong Region" will be displayed
- Press the **Display** button on the remote control
- Go to the **TC** entry and enter **05**
- Press **Play**
- This hack is lost once the power is turned off the unit so you'll need to re-enter it each time you wish to view a region one disc.

DVD-114

Multi-Region:

- Press **Open/Close** on the remote
- Press **3, 3, 0, 8, 8** followed by the region number i.e **1** for region 1, **2** for region 2 and so on. Press **0** for region free
- Press **Open/Close** on the remote

DVD-119

Multi-Region:

- Empty Tray
- Press **Setup** on Remote
- Press **Next, Prev, Next** and **Prev**
- **Ver** should appear in the top right
- Change to **255** using **Left** and **Right** buttons
- Turn **Off** and back **On**

DVD-129

Multi-Region:

- Turn the player **On** and make sure there is no disk in the machine
- Take the remote control and press the **Setup** button
- Type in **1, 3, 6** and **9** and a selection screen is opened
- Use the **Up** or **Down** button to select region (these are listed **1 to 6** or **0** for multi region)
- Press **Select/Enter/OK** to keep the choice

TDVD3450

Multi-Region:

- Press **DVD** mode button on the TV panel
- Press **Set Up** on the remote control
- Press **Next Arrow** on the remote control (4 times) to open the **Version Screen** which shows the words version 2 on the top right hand corner of the TV screen
- Use **Arrow Keys** on remote to change version to **255** which is the setting for multi region
- Press **Set Up** on remote to save setting

Apex

AD-600A

Multi-Region:

- Press the **Setup** button on your remote control
- Using the onscreen menu, select the **Preferences** option
- Press the **Still/Step** button on your remote control
- Press the **Prev** button on your remote control
- Press the **Next** button on your remote control
- You will now enter the hidden setup page, and can change the player to any region or set it to region free. You can also disable Macrovision from this menu

If the above fails to work then you may want to try the following:

- Using the remote press **Stop**
- Press **3, 8, 8, 8** and then **3**
- If the above fails to display a service menu then you may want to try **3, 7, 7, 7** and then **4** or **8 4, 2, 1** and then **3**
- This will display a system menu where you can select the required region or set the player to region free by selecting **9**

To change the video output format between PAL and NTSC:

- Press the **Set-up** button on your remote control
- Press the buttons **7, 2, 5, 5** and **5** on your remote control

To see what version of the firmware your player is using:

- Press the **Set-up** button on your remote control
- Press the buttons **1, 2, 3** and **4** on your remote control

To convert this player to Multi-Region on older firmware:

- Press the **Set-up** button on your remote control
- Using the on screen menu, select the **Preferences** option
- Press the **Still/Step** button on your remote control
- Press the **Prev** button on your remote control
- Press the **Next** button on your remote control

You will now enter the hidden set-up page, and can change the player to any Region or set it to Region Free. You can also disable Macrovision from this menu

AD-1100

Multi-Region:

- **Open** the tray
- Press **3, 4, 9, 7, 3, 4** and **0** for region free, **1** for region **1** and so on
- If you've selected region free then the message "region free" appear

AD-1200

Multi-Region:

- **Open** the players tray
- Key in from the Remote **8, 4, 2, 1**
- Choose a Region then press **OK, 9** is region free

AD-3201

Multi-Region:

- **Open** the players tray
- Enter **8, 4, 2, 1** on the remote control
- This takes you to the region and Macrovision setup screen
- Select region code with the **Enter** key of the remote (**9** for region free)
- **Close** the tray to save the setting

Arcam

HT-DV90, FMJ-DV88, FMJ-DV27

Multi-Region:

- Press the **Open/Close** button on your Remote Control
- Press the buttons **1, 1, 1** and then **1** one at a time from the Remote
- Then press **01** on the Remote to select **Region 1**, or **02** for **Region 2**, and so on, or enter **13** to select **Region Free**
- The word **Region** and then the number you selected should briefly appear on screen to confirm that the hack has been successful

Aspire

AD-900, AD-1000

These are the instructions are for a player purchased in the US for use in the UK. The unit is 120/240 voltage and plays PAL and NTSC DVDs.

Multi-Region:

- **Open** tray door
- Press **Setup**
- Press **Right** arrow keys to choose the option **Preference Page**
- Press digit buttons **1, 3, 7** and **9**
- The TV screen will show an interface: REGION CODE: 1 (1 means region 1)
- Press **Up** and/or **Down** arrow keys to change the number **1** to **0** (0 means region free)
- Now the setting is OK, press **Setup** to exit

Audiologic

DVD-101

Multi-Region:

- **Open** the tray
- Press **1, 4, 5, 6** and **0**

DVD-850

Multi-Region:

- **Open** the tray
- Press **8, 5, 2, 6**
- Enter the region number required or **0** for region free and no Macrovision

DVD-1430

Note: You have to enter these codes fast and you may need to attempt it more than once

Multi-Region:

- Put Into DVD Screen Mode
- Press **Setup** and have this set **On Screen**
- Using remote press **1, 3, 6, 9** and then immediately press **Left** arrow **3** times followed by the **Right once**
- You will now see a new option **Version**
- Enter **Version** menu and select region code as required, **0** Is region free

Audiosonic

DVD-2004, DVD-2009

Multi-Region:

- **Open** the disc tray
- Press **7, 7** and **Enter** on the Remote Control
- A secret menu appears where you can change the Region and turn Macrovision off

DVD-2005

Multi-Region:

- **Open** the players drawer
- Key in **8, 4, 2, 1** on the Remote Control then OSD changes to Region code
- Select desired Region code (9=all regions) with '**Select**'
- **Close** the players drawer

Bluesky

DV-710,DV-900

Multi-Region:

- With no disc in the drawer type the code **1, 6, 7, 1** and **9**
- This brings up a hidden menu (If it doesn't work 1st time open & close the drawer & try again after a few seconds)
- Select the **1st line** of the menu and press **Ok**
- Then select **0** for multi-region - **CAUTION** do not touch any other settings
- Press **Exit** to leave the menu and the hack is complete

Bose

321

Multi-Region:

- Press the **9, 4, Shuffle, Stop** and **Mute** buttons on your remote control

To Set a Specific Region

- Press the **Open, Stop, Shuffle** buttons on your remote control to **Open** the disc tray
- Press the **1** button on your remote control for region **1**, **2** for region **2**, and so on
- Press the **Enter** button on your remote control

Bush

DVD-102

Multi-Region:

- Press the **Open/Close** button on the players Remote Control to open the drive tray.
- Press the buttons **2, 0, 0** and **1** on the Remote Control.
- Press the **Enter** button on the Remote Control
- You will now enter a hidden Setup page, and can change the player to any Region. To set it to Region Free enter **13** as the country code. You can also disable Macrovision from this menu.
- Press the **Open/Close** button on the Remote Control to close the drive tray.

DVD-1000, DVD-2000

Multi-Region:

- **Open** the DVD players tray.
- Place a Region 1 disc in the tray, but don't close it.
- Press the buttons **0, 1, 2** and then **3** on your remote control in order, one at a time.
- Press the **Play** button on either your remote or the player

To change the player back to Region 2 only functionality:

- **Open** the DVD players tray.
- Place a Region 2 disc in the tray, but don't close it.
- Press the buttons **Return** and then **Play** on your remote control in order, one at a time

If the multi-region hack fails to work on the Bush **DVD-2000** then try:-

- **Open** the tray using the button on the player fascia
- Using the remote press **7, 7** and **Enter**
- The set-up page should now be indicated
- Change the region to **13** to make region free, **MacroVision** can also be disabled from this menu.

DVD-2002

Multi-Region:

- Press the **Open** button on your remote control to open the tray.
- Press the **7** button on your remote control.
- Press the **Enter** button on your remote control.
- Press the **7** button again on your remote control.
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free by entering **13** as the country code. You can also disable Macrovision from this menu.

You can also try this if the above fails:

- Press **Open** on the Remote Control
- Press **2, 0, 0** and **1**
- The player should now be in Multi-Region mode

DVD-2004

Multi-Region:

- Press the **Open** button on your remote control to open the tray.
- Press the **7** button on your remote control.
- Press the **Enter** button on your remote control.
- Press the **7** button again on your remote control.
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free by entering **13** as the country code. You can also disable Macrovision from this menu.

You can also try this if the above fails:

- Press **Open** on the Remote Control
- Press **2, 0, 0** and **1**
- The player should now be in Multi-Region mode

If you have the "A" revision of this player try:

- **Open** the tray type in and from the Remote key in **3, 3, 0, 8, 8**
- Then press **1** for Region 1, **2** for Region 2 etc. Use **0** for all Regions
- **Close** tray to complete

DVD-2005, DVD-2009

Multi-Region:

- Power **On** your player
- Press **Open/Close** on the remote
- Press **Zoom**
- Press **A/B**
- Press **Up, Left, Down, Right**
- The DVD player may show a region free message, powering off/on your player does not remove the region free setting

DVD-2008

Multi-Region:

- Open the DVD door by pressing **Open** on the Remote
- Key in **3, 3, 0, 8, 0** with the number pad on the Remote
- Press **Play** on the Remote, and the DVD door will close
- The DVD player is now Region Free

DVD-2023

Multi-Region:

- This player should be region free straight from the box

If the player fails to be multi-region then you may wish to try the following instructions:

- Press the **Open** button on the remote
- Using the remote press **2, 8, 1** and **2**
- Press the **Close** button on the remote

For VCD playback:

- Put a VCD in tray and Close
- Press the **Goto** button repeatedly until the VCD menu appears
- Press **Stop**
- Press the **Goto** button - a time bar should appear
- Press **0** then **Play**

DVD-2035, DVD-2035xi

Multi-Region:

- Turn **On** the player
- Press **Setup**
- Enter **1, 3, 6** and **9**
- Press **Left, Left, Left** and **Right**
- A new entry appears in the **Setup** menu called "**Version**" where you can change the region code with the Up and **Down** arrows. Changing this value to **0** sets the player region free

DVD-2037

Multi-Region:

- Press **Open** and then **Setup**
- Press **Next, Previous, Next** and **Previous**
- Scroll To **Ver 255**
- Press **Close**

DVD-2523

Multi-Region:

- Turn **On** the player and **Eject** the disc tray
- On the remote press **2, 8, 1, 2** followed by **Enter**
- This gets you to the engineers menu
- Press **Down** until you reach COUNTRY CODE and press **Enter**
- The current region code will change to four dashes (---)
- Input one number (0=Region Free, 1=USA 2=Europe, etc) and press **Enter** again
- The new region code will now be displayed. You can exit by just pressing the **Eject** button once more

DVD141TV, DVD141RC

Multi-Region:

- Turn the TV **On**
- Press **TV/AV/DVD** button twice to get to DVD screen
- **Open** the tray
- Press **Stop**
- Enter **1, 9, 9, 9**
- A new menu will appear allow region selection
- **Close** the tray

AV-11K

Multi-Region:

- **Open** the DVD tray and ensure in stop mode
- Now press **Setup, Next, Prev, Next** and **Prev**
- On screen you will see **VERSION 2**
- Select **255** for Region Free
- Press **Setup** key to save settings

If this doesn't work with your remote try using the DVD from panel keys

VCD Playback:

- Press **Setup** on the remote
- Now press **Next, Prev, Next** and **Prev**
- **Ver** should appear in the top right
- change **3001** to **3000**
- change **5001** to **5000**
- **VCD** and **SVCD** playback is now enabled

Cambridge

DVD-350

Multi-Region:

- Press the **Open/Close** button on your Remote Control
- Press the **Zoom, A-B, Up, Left, Down** and **Right** button
- The words **Region Free** should briefly appear on screen confirming that your player is now region free

To Change to a Specific Region:

- Press the **Open/Close** button on the Remote Control to open the drive tray

- Key in the numbers **1, 1, 1** and then **1** on Remote Control, in order, one at a time
- Press the button **1** on the Remote Control to select Region 1, or **2** to select Region 2, etc.
- The word **Region** and then the number you selected should briefly appear on screen to confirm that the hack has been successful

To Change Back to Region 2:

- Press the **Open/Close** button on the Remote to open the drive tray
- Press **Zoom, Up, Left, Down** and **Right** button
- The drive tray should close the player should now return to its factory default settings

Celestion

DVD-300

Multi-Region:

- Open up cover (Flap) on remote and switch to DVD
- Press **Open** (Tray should open)
- Press **+10** Key
- Enter Code **2, 0, 1, 1** and **0**
- Player should now be region 0

Compacts

DVD-5000

Multi-Region:

- Press **Power On**
- Press **Open/Close**
- press **Setup** on remote
- Setup menu will appear key and in **8, 8, 8** and **8**
- A version row will appear
- Select version and set the region **0** for all regions

DVD-S580

Multi-Region:

- Press remote controller **Open/Close** key (confirm tray is open)
- Press **Setup** then **Vol+, Vol-, Vol+, Vol-**
- Use **<-- -->** keys to change region (255 = region 0)
- Press **Enter**
- Press **Setup** to exit

DVD-800

Multi-Region:

- With no disc in, press **Menu**
- Press **1** and then **9**
- Press **Up/Down** keys to change region
- Press **Enter** key

Crown

CDV-550

Multi-Region:

- Press the **Open** button on the front of the player to open the drive tray
- Press the **Setup** button on your remote control
- Using your remote press **4, 9, 5, 4** and **0**
NB: You may need to perform this step quicker if this doesn't work as expected
- The onscreen display will display the word **Version**
- Press the **Play** button on your remote control
- Press the **Right** button on your remote control to highlight the currently selected region number
- Using the **Left** and **Right** buttons on your remote control, you can alter the region to **1** for region 1, **2** for region 2, and so on, or **0** for multi-region
- You can also enable VCD and HDCD playback from this menu
- Press the **Setup** button on your remote control
- Press the **Open** button on the front of the player to close the drive tray
- Power **Off** your player
- Power **On** your player

CDV-661

Multi-Region:

- Using the remote press **Menu**
- Press **1, 6, 7** and **Mute**

If the above fails to work then you may wish to try the following:

- Using the remote press **Set-Up**
- Press **Goto** general set-up
- Press **Play**
- Goto **TV** display
- Press **<<** and **>>**

CDV-1100

Multi-Region:

- Press **Open/Close** button on remote
- Press **8, 4, 2** and **1** - these will appear in top left-hand side of the screen
- Press **Select**
- Then use **Select** key to change regions
- Set to region **9**
- Then press **Open/Close** button
- The player should now be region free

Cyberhome

AD-N212, AD-N512

Multi-Region:

- Press the **Open** button on the remote control to open the drive tray
- Press the **7** button on the remote
- Press the **6** button again on the remote
- Press the **SEL** button on your remote
- You will now enter the hidden setup page, and can change the player to any region or set it to region free by entering **13** as the country code

This hack may not work on all versions of firmware. Note that the newer **Cyberhome AD-M512** model doesn't appear to support this hack.

DVD-300

Multi-Region:

- Turn **On** the player and make sure there is no disc in
- **Close** the tray
- Press **Menu, 1** and **9**
- A menu will appear and press **Enter**, this will highlight the Region setting
- Press the number of the region required i.e. **0, 1, 2** etc.
- Press **Enter** again
- Press **Open/Close** tray

AD-L528, DVD-302

Multi-Region:

- Turn **On** the player
- **Open** the tray
- Press **Stop**
- Enter **1, 9, 9, 9**
- Select the required region code. i.e. **1** for region 1, **2** for region 2, and so on.
- Press **Enter** to confirm change
- **Close** the tray with the remote

If the above fails to work then you may wish to try:

- Turn **On** the player
- **Open** the tray
- Press **Stop**
- Enter **3, 3, 5, 8**
- Select the required region code. i.e. **1** for region 1, **2** for region 2, and so on.
- **Close** the tray with the remote

DVD-400, DVD-402, DVD-405

Multi-Region Hack 1:

- Turn **On** the player
- Press **Setup**
- Enter **1, 3, 6** and **9**
- Press 3 x **Left**
- Press 1 x **Right**
- A new entry **Version** appears in the **Setup** menu
- Change the region code with the **Up** and **Down** arrows
- Changing this value to **0** sets the player region free

Multi-Region Hack 2:

- Turn **On** the player
- Press **Setup**
- Enter **1, 3, 6** and **9**
- Press 3 x **Left**
- Press 1 x **Right**
- A new entry **Version** appears in the **Setup** menu
- Move cursor **Down** to Version and then cursor **Right** to highlight **B40016c**
- Enter **1, 3, 6** and **9**
- Change the region code with the **Up** and **Down** arrows
- Changing this value to **0** sets the player region free

DVD-505

Multi-Region:

- Ensure the tray is **Closed** with no disc
- Press **Menu**
- Press **1, 1, 1**, and **1** to **Open** a hidden configuration menu.
- Use **Up** and **Down** arrows to highlight **Configuration** and press **Enter**
- Enter desired region code, i.e. **1** for R.C.-1 and **2** for R.C.-2 etc

Note:- There are rumours that this can only be done 100 times.

Be very careful not to change the option on the second line **Destroy Selection** table. Don't even touch it! Changing this option to "Yes" will disable the possibility to change the code in the future, although updating the firmware will fix this.

There is a firmware update available from www.cyberhome-help.de that renders the machine region code free and also claims to turn off Macrovision. The manufacturer has a firmware update available at www.cyberhome-europe.de that claims to fix a couple of minor bugs with subtitles etc.

CH-LDV710

Multi-Region:

- Press **Setup** on remote control
- Move to **General Setup**
- Press **1, 3, 6, 9** in order
- Then use the **Down** button to select the region you want to set it to (set **0** it will play all discs then)
- Press **Enter**
- Exit out of the **Setup** menu

If this code fails to work then you may wish to try the code listed above.

Cyrus

DVD-7

Multi-Region:

- Press the **Play** button on the Remote Control
 - Key in **2, 5**, and **6** on the Remote
 - The display should now show "....."
- From the Remote, enter the code **222 222 005 255**. Note that the last digit will not show on the display.
 - Press the **Play** button on the Remote

Daewoo

DV-115

Multi-Region:

- Remove any discs in the machine
- Press the **Open/Close** button on the front of your DVD (Open lid)
- On the Remote Control key in **8, 9, 2** and **6**
- Wait for five seconds
- Press **0** on the Remote Control
- Wait for 15 seconds
- Press the **Open/Close** button on the front of your DVD (Close lid)

DQD-2000, DHC-2200, DHC-2300, DHC-5800K

Multi-Region on Earlier Firmware:

- Press the **Setup** button on the Remote Control
- Press the **Title, Step** and **Next**
- Using the **Up** and **Down** buttons on the Remote, select the Region of your choice or **Bypass** for Region free
- **Save** and then **Exit** the menu

Multi-Region on Later Firmware: Later Firmware:

- Press the **Open** button on your Remote Control
- Press the **Setup** button
- Press the **9** button for **Region Free**, or **1** for Region 1, **2** for Region 2, and so on
- Press the buttons **2, 0, 1** and then **0** on your Remote, or if this doesn't work, try pressing the buttons **3, 0, 1** and then **0**
- Press the **Step, Shuffle** and **Next** button

Check Multi-Region Settings on Later Firmware:

- Press the **Open** button on the Remote Control
- Press the **Setup, Shuffle, Step** and **Next** button
- A secret menu will appear, inside which you can scroll down until the words **Debug Item** appears, where the current region status is displayed

Fix Low Sound Output when Connecting Via SCART on Later Firmware:

- Press the **Setup** button on the Remote Control
- Press the **Stop, Step** and **Angle** button
- The word **RFOUT** will appear on screen briefly and the sound will now have been adjusted to normal levels

- A secret menu will appear, inside which you can scroll down until the words **Debug Item** appears, where the current region status is displayed

DQD-2100D, SD-3500P, SD-9500P, SD-9800P

Multi-Region:

- Press **DVD** to active the DVD player
- Press **Open** button on remote to open the disc tray
- Using remote press **0, 5, 2** and **0**, in order, one at a time
- Press the **Up, Down, Left** and **Right** button on your remote
- You should now be able to change the region. Press **1** for region 1, **2** for region 2, and so on, or **0** for multi-region playback

Note: the **Up, Down, Left** and **Right** buttons are ones surrounding the **Enter/OK** button.

DS-2500N

Multi-Region:

- Turn the DVD player on
- Open the tray, do not insert a disc
- Press **Setup** on the Remote Control
- From the menu, choose **Parental Control**. Once highlighted press **OK** on the Remote
- On the **Parental Control** menu, choose **Defaults**, then highlight **Reset** (**do not** press **OK** at this point)
- While **Reset** is highlighted, enter, with the Remote Control, the following codes to change Region or make the player Region free, **5270** for Region free, **5271** for Region 1 (US & Canada), **5272** for Region 2 (Europe, etc.)
- After entering the code you want, if it was properly entered, you will see the words:
REGION:FREE (if you chose code **5270**), **REGION:1** (code **5271**) etc.
- Then press **Ok** on the Remote
- You will then see a **Password Verify** screen, enter **0, 0, 0, 0** and then press **Ok**
- Finally, press **Setup** to exit

DVG-3000N, DVG-5000D, DVG-6000D

Multi-Region:

- Turn the player **On**
- Press **Open/Close**, to open the tray
- Press **Setup** on the Remote Control
- Press **Play**
- Choose **TV Type** in the menu with Remote Control
- Press **Stop** on the players front panel (**NOT** from the Remote)

- Press **Previous, Next** on the players front panel
- The **Region ID** menu should come up
- Select the desired Region (with Remote Control) setting to Bypass for Region free
- When you have selected the desired Region press **Play**
- Now press **Setup** on the Remote

You could also try this if the above fails:

- Power **On**
- Insert a disc
- Press **Stop** twice (full Stop)
- Press **Setup, II (Still/Pause), Previous** and **Next**
- The "**Factory Control Page**" Menu will appear on the Screen
- Move to **Region Code** with Arrow/Direction Buttons on the Remote Control and press **Play**
- Press **Setup**

DVG-4000S

Multi-Region:

- Turn the player **On**
- Press **Eject, Setup, Stop, Previous** and **Next**
- **Factory Control Page** will appear on the display
- Move to **Region Code** with **Direction** keys on the remote and select required region
- Press **Play** and **Setup**

DVD-5000N

Multi-Region:

- Go [here](#) to upgrade the firmware
- Press **Setup** and **Stop**
- Press |<< (Track backward)
- Press |>> (Track forward)
- Enter the Region selection option and select bypass for multi-region

DVD-5700

Multi-Region:

- Press **Open/Close** (tray open)
- Press **Setup, Shuffle, Step** and **Next**

You should be able to see the secret menu and scroll down to **Debug** and the list shows from 1-9. Option **9** is region free/bypass. By default **1** is ticked and will not be able to change permanently.

Here is the solution to change the Region code:

- Press **Open/Close** and **Setup**
- Press **X, 3, 0, 1, 0** (where **X** is your choice of Region 1-9)
- Press **Step, Shuffle** and **Next**

Go to secret menu and check the Region you set. You can change to any Region by following the above steps.

DVD-5900

Multi-Region:

- Turn Power **On**
- **Eject** Disc Tray
- Enter **8, 5, 6** and **1**
- Now select Region **0**

DVD-6000G

Multi-Region:

- Press **Open** button on your remote control to open the disc tray
- Press **Setup, Stop, Previous** and **Next** button
- A hidden menu will appear where you can select **1** for region 1, **2** for region 2, and so on.

DHC-8000K

Multi-Region:

- Press **Stop** on remote
- Press **4, 4, 0** and **8**
- Press **0** for all regions, **1** for region 1, **2** for region 2, and so on
- The on-screen display should then indicate the new region. If nothing happens repeat the above sequence but faster

DVD-8100P

Multi-Region:

- Press **Set-Up**
- Enter **0, 5, 0, 2** (or **0, 5, 2, 0**)
- Press **Up, Down, Left** and **Right** Buttons

To put the player back to its original state repeat the above instructions

DVG-8300SE, DVG-8500N

Multi-Region:

- Turn **On** the unit and **Open** the tray
- Then press **1, 3, 7** and **9** (4 X's should appear in top left of the screen)
- Then press the region number (**1** thru **6**) or **0** for region free (although the **0** option may not work for the DVG-8500N)

DVG-9000S

Multi-Region:

- Power **On** DVD player
- Press **Setup**
- Press **1, 3, 6, 9, 8, 8, 8** and **8**
- A new button called **Version** will now appear in the **Setup** window
- Press **Down** until you come to **Version**
- Press **Play**
- Press **Up** or **Down** to select the required region. Choices are from **0** to **6**
- Press **Setup**

Dalton

DVX-500

Multi-Region Español:

- Pulsar **Menu** en el mando a distancia
- Pulsar **Flecha** abajo
- Pulsar el numero **0** para multizona
- Pulsar **Mute**
- Pulsar capítulo **Atras**
- Pulsar capítulo **Adelante**
- Pulsar **Menu**

Multi-Region English:

- Press **Menu** button on your remote
- Press **Down** arrow
- Press **0** number
- Press **Mute**
- Press **Previous** chapter
- Press **Next** chapter
- Press **Menu**

Dansai

DVD-825, DVD-952

Multi-Region:

- Using the remote press **Setup, Stop, Previous** and **Next**
- You should now be in a secret menu where you can change the Region from **1** to **6**, or **Bypass** for Region free
- You can also disable Macrovision from this menu

You can get more information by visiting www.dansai.freehosting.net. If you pester **Tesco** long enough they may well just send you an upgrade CD to enable a VCD option.

DVD-825S

Multi-Region:

- Power on player with **No** DVD in the drive
- Press **Set-up** on the remote
- Press **Stop, Prev** and **Next** on the players fascia
- A service menu will then be displayed which will allow you to change the region and disable Macrovision

DVD-852

Multi-Region:

- Press **Setup**
- On front panel of unit press **Stop, Previous** and **Next**
- You should now be in a secret menu where you can choose region 1-6, or bypass for region free. You can also disable Macrovision from this menu.

DVD-902

Multi-Region:

- Power **On** and **Open** tray
- Press **Setup**
- Press **Right** x 3 times
- Press **Up** once
- Press **4, 9, 5, 4** and **0**
- Region menu appears
- Change to **0** for all regions

DVD-955

Multi-Region:

- Using remote turn **On** and **Open** draw
- Press **Setup** and select **Custom Setup** using remote cursors
- Press **3, 3, 3** and **3**
- Region code is indicated
- Using remote highlight **0** and press **Enter**
- Press **Setup**

DVD-1010

Multi-Region:

- Press **Setup** on the Remote
- Press **Stop, Fwd, Prev** and **Next**
- Now select the **Region id** and select bypass for Region free. Macrovision is set to off on this model

You can get more information by visiting www.dansai.freehosting.net. If you pester **Tesco** long enough they may well just send you an upgrade CD to enable a VCD option.

Dantax

DVD-450

Multi-Region:

- **Eject** tray and press **7, 7** and **Select** on the remote
- This will bring up a secret menu where you can set the region (13 for all) and disable Macrovision

DVD-1000

Multi-Region:

- **Open** Tray
- On remote control press **9, 9, 2, 6** and **0**
- **Close** Tray and power **Off**
- Turn power **On** again after approximately 1 minute
- The DVD player will now recognise all regions

DVD-1500

Multi-Region:

- **Open** the tray
- Type **9, 9, 9, 9**, and **x** where **x** is the required region
- **Close** the tray

Daytek

DVD-707

Multi-Region:

- Press **Setup** on the remote
- Press **1, 3, 6, 9, 8, 8, 8** and **8**
- On the screen a new **Version** item should appear
- Use the remote **Down** key and select **Version** by pressing **Play**
- Use the **Right Arrow** to go to the number displayed in the submenu that appears
- Use the **Up/Down** keys on the remote to select **0** for all regions
- You may have to press **Play** on remote again or use the left arrow
- Press **Setup** again

Decca

DV-2110, DV-5100

Multi-Region:

- Press **Setup** on the Remote
- Press **Stop, Previous** and **Next** on the front panel of the player
- You should now be in a secret menu where you can change the Region from **1** to **6**, or **Bypass** for Region free
- You can also disable Macrovision from this menu

DV-2130

Multi-Region:

- Press **Setup** on remote
- Press **Fast Forward**
- Press **Previous** followed by **Next** (You can use the front panel or the remote for this second part)
- A **Factory Settings** page will be displayed which contains four sub-menus
- Under **Region** you can select Region 1-8 or just bypass region codes altogether. This unlock also enables VCD compatibility

DV-2141

Multi-Region:

- Using the remote press **Eject** and leave tray **Open**
- Press **Setup, 4, 9, 5, 4** and **0/10**
- Version will appear at bottom of Setup menu
- Highlight **Version** and press **Play**
- Select Region **1, 2, 3, 4, 5, 6** or **0** for multi-region
- There are also settings to play VCD, WMA, etc

DVD-121

Multi-Region:

- Power on the unit and open the DVD door by pressing the **Open** button on the front panel
- Press **Setup**
- Use Remote Control to enter the following numbers **3, 3, 0, 8, 8**
- You will see in the top left of the screen "*****" appear
- Key in a number corresponding to the Region you desire your player to be set to, i.e. **1** for Region 1, **2** for Region 2 and so on, use **0** for Region free

Denver

DVD-121, DVD-311, DVD-321,JDV-200

Multi-Region:

- Power on the unit and open the DVD door by pressing the "**Open**" button on the front panel
- Press **Setup**
- Use Remote Control to enter the following numbers **3, 3, 0, 8, 8**
- You will see in the top left of the screen "*****" appear
- Key in a number corresponding to the Region you desire your player to be set to, i.e. **1** for Region 1, **2** for Region 2 and so on, use **0** for Region free

DVD-122

Multi-Region:

- **Open** the tray by pressing the button on the fascia
- Use Remote Control to enter the following numbers **3, 3, 0, 8, 0**
- Press **Play** on the remote
- The tray will close

DVD-402

Multi-Region:

- Ensure DVD in **Stop** mode and using the remote press **Setup**
- Using remote press **1, 3, 6** and **9** (for the newer model enter **1, 3, 7, 9**)
- Press **Left** arrow **3** times and then press **Right**
- A **Version** menu will appear
- Select **Version** menu and then select **0** for All for all regions

DVD-438

Multi-Region:

- **Open** the tray
- Press **Setup** then **1, 3, 7** and **9**
- Change region code with arrows (**0** for region free)

Diamond

DVD-101, DVD-101D

Multi-Region:

- Open tray drawer
- Press **9, 9, 9, 9** on the Remote
- Press **OK**
- Press **9** for Multi-Region, **1** for Region 1 and so on

DVD-103D, DVD-105, DVD-302, DVD-808

Multi-Region:

- Open tray drawer
- Press **9, 9, 9, 9** on the Remote
- The current region will be displayed on the screen
- Press **OK** to increment the region number. Use **9** for Multi-Region

DVD-210D

Multi-Region:

- Open tray drawer
- Press **2, 9, 1, 8**
- Press **Enter** (a manual will appear on the screen)
- Use the up and down buttons to choose the Region code
- Press **Enter (13)** and **Enter** for multi-region)
- Press **Setup**

DVD-8072

Multi-Region:

- **Open** the tray
- Press **9, 9, 9, 9** and **Enter**

Digitor

G1605, G1606

Multi-Region:

- Ensure **no** DVD is in the player
- Using remote press **1, 6, 7, 1** and **9**
- Press **OK** when configuration menu appears
- Press **0** for all regions
- Press **Exit**

G1608

Multi-Region:

- Power **On** and **Open** the tray
- Using the remote press **2, 8, 1** and **2** to access the configuration menu
- Press **9** for all regions
- **Close** the tray to exit menu

Digitrex

GK-1100

Multi-Region:

- **Open** the tray
- Press **3, 4, 9, 7, 3, 4** and **0** for region free, **1** for region **1** and so on
- If you've selected region free then the message "region free" appear

GKX-9000

Multi-Region:

- Turn **On** the unit and make sure there is **No** disc in the player
- On the remote control, input the numbers **0, 0, 8, 6, 0, 0, 0** and then press **Select**
- Turn the unit **Off** and **On** again

Digitron

DVS-360

Multi-Region:

- Press the **Setup** button on your remote control
- Using the onscreen menu, select the **Preferences** option
- Press the **Still/Step** button on your remote control
- Press the **Prev** button on your remote control
- Press the **Next** button on your remote control
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free. You can also disable Macrovision from this menu

Digix Media

DV-228U

Multi-Region:

- Turn **On** the DVD Player
- **Open** the tray and leave it open throughout this process
- Press **Menu** on the remote
- Enter the following code **2, 0, 1** and **1**
- Press **0** on the remote, this enables the DVD to play ALL regions
- **Close** the tray and turn **Off** the player

DV-526UP

Multi-Region:

- Power **On**
- **Open** the tray and leave it open
- Press **Menu** button on remote
- Enter the code using remote **8, 8, 8** and **8**
- Press **Next** button on remote
- A menu will appear where the DVD player region can be selected and Macrovision disabled

DM Tech

DVD-500, DVD-2000

Multi-Region:

- Using the remote **Open** drive tray
- Press **Setup** and highlight **Custom**
- Press **3, 3, 3, 3** and Select **0** then **Enter**
- Press **Setup**

DM-R7030

Multi-Region:

- **Open** the DVD tray
- Enter **Setup** menu and enter the **Rating Setup** menu and **Choose Default**
- Press **5**
- You can set the code to region free

Finlux

DVD-410

Multi-Region:

- Don't insert disk, press **Set-up, Stop, Previous** and **Next**
- Now you are in the factory menu where you can set region and Macrovision

DVD-510

Multi-Region:

- Press **Set-up**
- Go to the **General** set-up and press **Play**
- Go to the **TV** display and press **Stop, Previous** and **Next**

DVD-511

Multi-Region:

- **Open** the tray
- Using the remote enter **2, 8, 1** and **2**
- Press **Enter**
- A system menu appears where the region code can be changed

Fisher

DVD-S1000, DVD-S1500

Multi-Region:

- Press the **Program** button on the Remote Control
- Press the **Right Cursor** button
- Press the **Right Cursor** button
- Press the **Enter** button
- Press the **Play** button

Eltax

DV-100

Multi-Region:

- On the remote control press **Open/Close**
- Press **7, 2, 8, 1, 8** + region (**0** = Multi region)
- In rare cases the DVD is blocked so it is unable to be played in multi region DVD-Players. In these cases the regional coding must be set to the region indicated on the software.

Ferguson

DVD-100FE

Multi-Region:

- Power **On**
- Press **Up, Down, Left** and **Right**
- Now press **1, 2, 3, 7, 8, 9, 4, 5** and **6**
- The player should now be region free

DVD-400FE

Multi-Region:

- Press the **Menu** button on the Remote
- Press the **1** button
- Press the **6** button
- Press the **7** button
- Press the **Mute** button

VCD Hack:

- Press the **Open** button on the Remote to open the drive tray
- Place an audio CD in the drive tray
- Press the **Open** button on the Remote to close the drive tray
- Press the **Menu** button
- Press the **1** button
- Press the **Index (1-All)** button
- Press the **Open** button
- Press the **1** button

Goodmans

GDVD-100

Multi-Region:

- Power **On** the unit and with no DVD in the tray
- Press **Set-Up, Menu, Step, Previous** and **Next**
- A service menu should now be displayed allowing region **Bypass** to be selected

GDVD-107R

Multi-Region:

- **Open** the the player drawer
- Press **9, 8, 1** and **7** on the Remote
- You will now be in the hidden menu where you can change the Region from 1 to 6 by pressing **Enter** on the Remote. Selecting **9** sets it to Region free
- You can also disable Macrovision from this screen
- If your TV does not support NTSC, you can also set the output to PAL from this screen

GDVD-122, GDVD-141

Multi-Region:

- Press **Set-up** on remote
- Onscreen menu will appear, press **Next, Previous, Next, Previous**
- **Ver2** should appear in the top right hand corner of the screen
- Use **Right** and **Left** buttons to change this to **Ver255** which is multi regional
- Press **Set-up** again and your done

GDVD-124

Multi-Region:

- Open the drive tray
- Press buttons **7** and **4** on the Remote Control. If this doesn't work, you may have to enter the digits **7** and **7** instead
- Press **Enter**
- A hidden menu will appear where you can scroll down to **Country Code** and using the **Select** button, choose any Region between 1 and 6, or select **13** for Region free
- Press **Return** to exit the menu

GDVD-125, GDVD-132, GDVD-138

Multi-Region:

- Turn on the player and **Open** draw
- Press **Setup**
- Select **Custom**
- Press **3, 3, 3, 3, 3**
- This opens the secret settings menu offering Regions 0-6 (choose **0** for Region free)

VCD Hack:

- Turn **On** the player
- Put a music CD on the tray and **Close** the door with the Close button on the player
- The music CD should start playing, when it does, press the **Open** button on the player
- Now put the VCD on the tray
- **Close** the tray with the Close button on player
- Press **Menu** then **5** on the remote
- Wait for **Stop** to appear on the display
- Press **0, 0, 0, 1, Play** then **0**
- The VCD should now start playing

GDVD-131

Multi-Region:

- Press the **Setup** button on the Remote Control
- Press **Vol+**, **Vol-**, **Vol+**, **Vol-**
- The onscreen display should show "**VER #**" indicating the currently Region setting
- Using the **Left** and **Right** cursor keys, change the Region code to **1** for Region 1, **2** for Region 2, and so on, or set it to **255** for multi-Region playback
- Press **Setup**

GDVD-134, GDVD-135

Multi-Region:

- Turn **On** the player and **Eject** the disc tray
- On the remote press **2, 8, 1, 2** followed by **Enter**
- This gets you to the engineers menu
- Press **Down** until you reach COUNTRY CODE and press **Enter**
- The current region code will change to four dashes (---)
- Input one number (0=Region Free, 1=USA 2=Europe, etc) and press **Enter** again
- The new region code will now be displayed. You can exit by just pressing the **Eject** button once more

VCD Hack 1:

- Turn **On** the player and place a VCD on the open tray
- Using the **front panel** press **Close** quickly followed by **Menu** and **5** on the **remote**
- This should load and play the disc. If the disc fails to play then press **0, 0, 0, 1** and the disc should then play

VCD Hack 2:

- Turn **On** unit and open draw
- Press **2, 8, 1, 2** and **Enter** on the remote to get the engineers page
- Insert your VCD and close the draw
- When the VCD has loaded you will have a blue screen with a yellow square in the corner
- Press **0, 0, 0** and **1** on your remote and the VCD will play
- Timing is NOT important on this hack

GDVD-1000

Multi-Region:

- Ensure there is no disc in the player
- Press **Setup, Menu, Step, Previous** and **Next** on the remote control
- A service menu should appear
- Select the required region or use **Bypass** for region free

GDVD-3000

Multi-Region:

- Press **Menu**
- Key in **1, 6, 7** on your remote control
- The key region box will pop up
- Key in the region you want
- Press **Mute**

VCD Hack:

- Insert a music CD
- Press **Menu, 5** and **Eject** on the remote control
- The tray should stay closed
- Press **1, Index, Menu** and **Eject** on the remote
- A menu should now appear
- Press **1** to enable VCD playback

GDVD-3500K

Multi-Region:

- Open the the player drawer
- Press **9, 8, 1** and **7** on the Remote
- You will now be in the hidden menu where you can change the Region from 1 to 6 by pressing **Enter** on the Remote. Selecting **9** sets it to Region free
- You can also disable Macrovision from this screen
- If your TV does not support NTSC, you can also set the output to PAL from this screen

GDVD-3600PKT, GDVD-4000PKT

Multi-Region:

- Power on the player and Open the tray
- Key in **8, 1, 3, 2, 8**
- Press **Enter** until you highlight **9** (Multi-Region)

VCD Hack:

- Turn **On** the player and place a VCD on the open tray
- Using the **front panel** press **Close** quickly followed by **Menu** and **5** on the **remote**
- This should load and play the disc. If the disc fails to play then press **0, 0, 0, 1** and the disc should then play

GDVD-5000

Multi-Region:

- Put the player into **Standby**
- Press **0, 0** on the remote control
- Press **1** for region 1, **2** for region 2 etc.
- To verify the current region press **0, 0** and **+10** to indicate the region on the front panel

GTV-14DVD

Multi-Region:

- Put into DVD screen mode
- Press the DVD **Setup** key and have this set on-screen
- Use remote to key in **1, 3, 6, 9** then immediately press the **Left** navigate arrow 3 times, followed by the **Right** key once. (this takes some practice, so don't stand too close to the TV)
- Now you will see a new option on-screen named VERSION
- Enter into **Version** and select region code as required (which means the code free option)

GTV-34RDVD

Multi-Region:

- Press the **DVD** function on your TV set
- Press **Set-up** on your remote control
- Press **1, 3, 7** and **9**, in order, one at a time
- Select option and using your remote control, change it to **1** for region 1, **2** for region 2, and so on, or **0** for multi-region playback

Grundig

GDV-100D

NOTE: Please note that these conversions may only work a maximum of 25 times! And after this time the machine may end up locked to the last region changed to.

Region One:

- Press the buttons **Play, 2, 7** and **4** on your remote control. The onscreen display should look like this: ' ____ ____ '.
- Using the number keys on your remote control, enter the code **005000128156**.
- Press the **Play** button on your remote control.
- The onscreen display should turn red, indicating that your region settings have been changed.

Region Two:

- Press the buttons **Play, 2, 7** and **4** on your remote control. The onscreen display should look like this: ' ____ ____ '.
- Using the number keys on your remote control, enter the code **002000128156**.
- Press the **Play** button on your remote control.
- The onscreen display should turn red, indicating that your region settings have been changed.

Factory Reset:

NOTE: This has only been tested on the Philips 710. There is an outside chance this may also get round the 25 region change limit, but will not unlock a region locked machine.

- Press the buttons **Play, 1, 5** and **9** on your remote control. The onscreen display should look like this: ' ____ ____ '.
- Using the number keys on your remote control, enter the code **00400100014 0**.
- Press the **Play** button on your remote control.
- The onscreen display should return to the original Philips splash screen, all settings will be reset back to factory defaults.

GDV-110, GDV-130

Multi-Region:

- Press the **Open** button on the Remote
- Then press **Setup**

- Press the **9** button on the Remote for **Region Free**, or **1** for **Region 1**, **2** for **Region 2**, and so on
- Press the buttons **2, 0, 0** and then **0** on the Remote
- Press **Step**
- Press **Shuffle**
- Press **Next**

Macrovision Hack:

- Press **Setup**
- Press **Stop**
- Press **Title**
- Press **Previous**
- Press **Setup**

Firmware Check:

- Press **Open**
- Press **Setup**
- Press **Shuffle**
- Press **Step**
- Press **Next**
- A secret menu will appear, inside which you can scroll down until the words **Debug Item** appears. This is where the current region status is displayed

GDV-200, GDV-210, GDV-212

Multi-Region:

- **Open** the DVD players tray
- Place a Region 1 disc in the tray, but don't close it
- Press the buttons **0, 1, 2** and then **3** on the Remote Control in order, one at a time
- Press the **Play** button on either the Remote or the player

Restore to Region Two:

- **Open** the DVD players tray
- Place a Region 2 disc in the tray, but don't close it
- Press the buttons **Return** and then **Play** on the Remote Control in order, one at a time

Earlier firmware versions will not play **The Matrix** and require an upgrade, this does not remove the hack. Earlier firmware freezes with RCE encoded discs.

GDV-211A

Multi-Region:

- Power **On** your machine
- Press the **Stop**, **Open/Close** and **Skip** buttons on your player simultaneously and hold down for **3** seconds
- A hidden menu should appear. Release the **Stop**, **Open/Close** and **Skip** buttons on your player
- Select **Region Number** from the hidden menu and choose the **Free** option
- **Exit** the menu

Earlier firmware versions will not play **The Matrix** and require an upgrade, this does not remove the hack. Earlier firmware freezes with RCE encoded discs.

GDV-220

Multi-Region:

- Switch the player **On**
- Press and hold the following buttons for 3 seconds, **Stop**, **Open** and **Skip**
- When the hidden menu appears select region free or a specific region
- **Exit** the menu

GDV-520

Multi-Region:

- Press **Menu**
- Now key in **1, 6, 7**
- Press **1** for Region 1, **2** for Region 2 and so on
- For Multi-Region mode press **Mute**

GDV-620HT

Multi-Region:

- Open the the player drawer
- Press **9, 8, 1** and **7** on the Remote
- You will now be in the hidden menu where you can change the Region from 1 to 6 by pressing **Enter** on the Remote. Selecting **9** sets it to Region free
- You can also disable Macrovision from this screen
- If your TV does not support NTSC, you can also set the output to PAL from this screen

Xenaro GDP-3100, GDP-3200, GDP-4204, GDP-5100, GDP-5120, GDP-6150

Multi-Region:

- Get into the Service Menu. This is not intended for home users, only for service technicians. Therefore you're asked for an access code, it is **8500** for all Xenaro DVD Players
- Activate "**System Messages**" using the Service Menu
- Leave the Service Menu and get into the "**System Information**" Menu
- When you see the System Info, enter the following code on the remote control. Note that the player will not print the code on the screen, you have to enter it blindly.
 - The code for the **3100** is: **70307194**
 - The code for the **3200** is: **70307195**
 - The code for the **4204** is: **70307196**
 - The code for the **5100** is: **70307196**
 - The code for the **5120** is: **70307198**
 - The code for the **6150** is: **70307192**
- A system message should appear. It will not appear if you got the code wrong or if you did not activate system messages in the service menu. Confirm the message with **Ok** on the remote
- Now a window appears in which you can change your region code. Values **1** to **8** and "**none**" are possible. "**None**" will disable the internal check of region codes (i.e. makes the player CodeFree), but RCE titles might not work. This doesn't really matter, as you can change the code as often as you wish to match a specific disc
- If you want to, you can disable System Messages again using the Service Menu after you changed the code

Harman/Kardon

DVD-1

Multi-Region:

- Put the player into **Standby** mode, with **no** disc in the tray
- On the Remote Control press: **3, 1, 4, 1, 5, 9** and **2**
- Then press the zone you want: **1-4**
- Power the player **On**
- Play the disc you want to

DVD-5

Multi-Region:

- Put the player into **Standby mode** with and ensure there is **no** disc in the tray
- Key in the following on the Remote Control: **3, 1, 4, 1, 5, 9** and **2**

- Now key in the number of the Region you require **1** for Region 1, **2** for Region 2 etc.
- Turn the player on
- Open the tray and play the disc of your choice

Note: that the Region code entered is stored when the player is switched off, therefore you will need to change Region for each disc. However it maybe that entering '0' for the Region code will set the player to Region free operation.

DVD-10, DVD-20, DVD-25, DVD-50

Multi-Region:

- Turn the player on
- Wait until '**No disc**' is displayed
- Press the buttons **3, 1, 4, 1, 5, 9** and **2** on the Remote Control
- The press **1** for Region 1, **2** for Region 2, **3** for Region 3, or **4** for Region 4 etc.
- The display should now show '**Power On**'

DVD-22

Multi-Region:

- Remove any discs from player
- Put player in **Standby** mode
- Keep **Clear** on remote control pressed while powering back **On**
- Press **OSD** on remote to bring up menu
- Enter the following code on remote: **3, 1, 4, 1, 5, 9, 0** to select region free mode (or instead of the last digit **1, 2, 3** or **4** to select region 1, 2, 3 or 4)
- The player now resets and is region free (or in one of the selected regions)

To bring player back into original factory mode repeat steps **1, 2** and **3**

Haus

H-315LS, H-615LS

Multi-Region 1:

- At the **Logo** screen press **Stop**
- Enter the code **2, 3, 1, 7**
- Then enter the Region you require
- **Power off** the DVD player
- Power on the DVD player and play the disc

Multi-Region 2:

- Press the **Stop** button on the Remote Control twice
- Key in **1, 9, 9** and **9** on the Remote
- You should now be in a hidden set-up menu where you can change the Region code to **1** for Region 1, **2** for Region 2, and so on, or **All** for multi-region playback

H-2001S

Multi-Region:

- Press **Stop** twice
- Press **Setup**
- Press **Vol+** and **Vol-** repeat the sequence twice in quick succession (**+, -, +, -**)
- The TV screen will display "**VER #**". Press **Left/Right** cursor keys to change the **#** - (**1, 2, 3, 4, 5, 6** for desired Region Code). For Multi-Region press **255**
- Press **Setup**

Himage

DVD-2290

Multi-Region:

- Press the **Open** button on the Remote Control to open the drive tray
- Press the buttons **8, 8, 0** and **0**, on the Remote Control
- Now press **1** for Region 1, **2** for Region 2, etc, or **9** for Region Free
- Press the **Open** button on the Remote to close the drive tray

Hitachi

HTD-K150

Multi-Region:

- Open the players drawer
- Press **Volume Up** on your Remote
- Press **Fast Forward** on your Remote
- The on screen display will show **321** followed by the current Region code
- Press **Volume Up** on your Remote
- Press **Fast Forward** on your Remote
- Repeat steps 5 and 6 until the desired Region code is shown on the display
- Press and **hold** the **Angle** button on the Remote for approximately five seconds to select the Region

PDV-302

Multi-Region:

- Power **On** and **Open** DVD lid
- Press **Set Up** on remote
- Go to **Preference Page**
- Press **Display** on remote. When this occurs there will not be any on-screen display so just enter the code
- Enter **0, 2, 8** and **3**
- Press **Display** again
- Select region code **0**
- Press **Set Up** on remote
- Power **Off** and then **On**

DV-P250E, DV-305E, DV-315E, DV-P515E

Multi-Region Hack 1:

- Always perform a Cold Start before applying the hack
- Power **On** whilst pressing hold both the **Play** and **Stop** buttons on the front player
- After a short while you should be presented with a set of language options.
- **Release** the **Play** and **Stop** buttons on the player
- You will now need to select a language option between **1** and **6**

Multi-Region Hack 2:

- Press the **Repeat** button on the Remote Control
- Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on the Remote Control for Region free, or **1** for Region 1, **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on the Remote Control

If the player sticks on FBI Warning screens:

- Press **Forward Search** x2 or faster, the disc should skip straight to the main feature

DV-P415U

Multi-Region:

- **Open** the players drawer
- Press and hold the **Enter** button on the Remote control
- Whilst holding **Enter** down, press **1** for Region 1, **2** for Region 2 and so on
- Release and play a DVD

DV-505

Multi-Region:

- Download and upgrade your unit using the **0123 firmware** and instructions from <http://www.theironduke.plus.com/HitachiSyndicate/Files/files.html>
- This will make your player multi-region, however you can also set it to a specific region by carrying on with the remaining steps
- Press the **Setup** button on the Remote
- Press the **Last** button
- Press the **Skip Previous** button
- Press the **Skip Next** button
- You will now enter the '**Loop Holes**' menu where you can alter the player region

Hoyo

DVD-713, DVD-715

Multi-Region:

- Switch the player **On**
- Press **Setup**, **Slow**, **Skip left**, **Skip right**
- Select the required region code with the cursor

DVD-8050D

Multi-Region:

- Press **Eject** leave tray open
- Press **1, 1, 1** and **1** followed by the region number you want. You may well see ******* appear in the top left of the screen, this is the point at which you change Region
- **Close** the tray

Hyundai

HDV-2000

Multi-Region:

- **Open** the tray and place a disc in the tray but don't close it
- Press the **Enter** button on the remote control
- Press the **Play** button on the remote control
- Press buttons **2, 5** and **8** on the remote control
- Press **1** for Region 1, **2** for Region 2, **4** for Region 4 and so on
- An error message will appear, after this your machine should be set the region specified

HU-2010

Multi-Region:

- **Open** the players tray
- Press **Setup** on the remote Control
- Go to the sub-menu "**Custom Setup**" by pressing **Right** on the remote **3** times
- Press **3, 3, 3, 3** on the Remote
- You should be taken into a new menu "**Secret1 Menu**" where you can select any region code you like, or **0** for Region free
- Press **Setup** on the remote to leave the menu once you have set the region

DM-350

Multi-Region:

- Power **On** and **Open** the disc tray
- Press **Setup** on the remote control
- Go to the **Custom Setup** menu by pressing the **Right** arrow on the remote control **4** times
- Using the remote control press **3, 3, 3** and **3**
- A service menu called **Secret Menu 1** should then appear
- Select the required region, i.e. **1** for region 1, **2** for region 2 and so on, or use **0** for region free
- Press **Setup** on the remote to exit the menu

Lasonic

DVD-1100,DVD-2100

Multi-Region:

- Press the **Open/Close** button on remote control
- Press the **VOL+** button on remote control
- Press the **VOL-** button on remote control
- Press the **VOL+** button on remote control
- Press the **VOL-** button on remote control
- The words **VER 1** appear on screen and with the arrows blues of the right or left you can change the region
- Press the **Open/Close**

DVD-2000,DVD-3200,DVD-8050

Multi-Region:

- Press **Eject** and leave tray open
- Press **1, 1, 1** and **1** followed by the region number you want
- **Close** tray and play the movie

Factory Reset:

- **Open** the disc tray and leave it open
- Key in on the Remote **1, 2, 3, 4**
- Press **Setup** twice
- This will reset the system to it's original manufacturer default

DVD-8092

Multi-Region:

- Using the remote control, key in the following: **Setup, Vol+, Vol-, Vol+, Vol-**
- The onscreen display should show "**VER #**"
- Using the blue **Left** and **Right** arrow keys, change the region code to the desired number, or **VER255** for region free

Lecson

DVD-900

Multi-Region:

- Press the **Open/Close** button on the Remote Control
- Press the **Zoom, A-B, Up, Left, Down** and **Right** button
- The words **Region Free** should briefly appear on screen confirming that your player is now region free

Restore to Region Two:

- **Open** the DVD players tray
- Press the buttons **1, 1, 1, 1** and then **2** on the Remote Control, in order, one at a time
- The words **Region 2** should briefly appear on screen confirming that the player is now in Region 2 mode

DVD-1000

Multi-Region:

- Switch **On** the unit
- Press the **Open/Close** button
- With the tray open press **Intro** button
- Press **2, 0, 1, 1** and **0**
- Television will display "Set OK"
- Press the **Open/Close** button

Lennox

HT-600

Multi-Region:

- Press Power **On** from remote control and **Open** tray
- Press **Volume** to maximum
- Press **Language** Button
- The screen will display current Region
- Use **Down** on Remote to change the Region to **1** For Region **1**, **2** for Region **2**, and so on. (But be quick)
- Press **Enter** on Remote

LG

DVD-1010

Multi-Region:

- Press the **Open** button on your remote control to open the drive tray
- Place the **DVD** in the drive tray
- Press the **Open** button on your remote control to close the drive tray
- The onscreen display should indicate the message "**Check Region Code**"
- Press **Display**, **Menu** and **Play** buttons in turn on your remote control

DVD-5083, DVD-5183

Multi-Region:

- Power **On** the player with no disc
- Press **Pause**, **1**, **4**, **7** and **2**
- Press the **Up** arrow **3** times, the characters **04 05** should then appear on the display
- Press **Program 6**, **Program 5**, the characters should then change to **04 FE**, if they don't then continue pressing until they do
- Press **Enter**
- Power the player **Off** then back **On** again

SVCD Hack:

- Power **On** the player with no disc
- Press **Pause**, **1**, **4**, **7** and **2**
- Press up arrow **6** times, the characters **07 00** should appear on the display
- Press **Program 6**, **Program 5**, the characters should then change to **07 FE**, if they don't then continue pressing until they do
- Press **Enter**
- Power the player **Off** then back **On** again

F-DV25, F-DV55, DA-5630, DC-593W, DC-593NW, DK-4821P, DK-8621P, DS-8400, LH6530, DVD-2000, DVD-2240N, DVD-2230, DVD-2300, DVD-2330P, DVD-2340, DVD-2380, DVD-3000, DVD-3200E, DVD-3230, DVD-3520, DVD-3530, DA-3530A, DVD-3350E, DVD-3351, DVD-3630A, DVD-4010, DVD-4210, DVD-4710, DVD-4721P, DVD-4730, DVD-4750, DVD-4830, DVD-4930, DVD-4950, DV-4941P, DVD-4950S, DVD-5500N, DVD-5500P, DV-5522, DV5942P, DVD-6812P, DVD-7711P, DV-7721P, DK-7821P, DVD-8621P

It is most likely to work on most **LG** players not listed above, although more recent players may have a different chipset. If it works on your player and its not listed above then please do let us know.

Multi-Region:

- Power on the player with no disk in the drive
- Wait for the "No Disc" message to appear
- Press **Pause** and **Enter** on the Remote
- Enter **3, 1, 4, 1, 5, 9** on the Remote (the word **COdE** or **FF** appears on the display)
- Enter **0** on the Remote (0 = All Regions, 1 = Region 1, 2 = Region 2, etc.)
- Press **Pause** on the Remote
- Power the player **Off**, wait 30 seconds and then power back **On**

If the above code fails to work then once the player has displayed the "No disc" message press **Stop** before entering the above code. If you have a **DV-5522**, **DVD-5500N**, **DV-7711P** and **DV-7721P** models then you may need to omit the **Enter** press in step 3. For **DA-3530A** with software version 0.9 omit the steps 5 and 6 - also the hack doesn't stay in the player memory so you'll need to re-enter it if it is powered off.

Firmware Version Display:

Note: Checking the firmware revision may reset the video selection mode so you may need to reapply this after using this option

- Press **Setup** on the Remote
- Select **TV Aspect**
- Place the cursor on **16:9** wide
- Enter **1, 3, 9, 7, 1, 3, 9** on the Remote
- Press **Enter** on the Remote
- Press **Setup** to clear the information once read

Beware: There are reports that entering a code to enable VCD playback may result in the players firmware becoming corrupted thus making the player unusable. It is for that reason we have not listed the code.

DVD-5222P

Multi-Region:

- Ensure no disc is in the player and turn it **On**
- Wait until "No Disc" appears on the LED display
- Press **Pause** on the handset
- Press **3, 1, 4, 1, 5** and **9**
- The LED display will now show a "Code --" prompt
- Press the single digit of the region desired (1-6, or 0 for all)
- Press **Pause** on the handset
- Turn the player **Off** and wait 5 seconds
- Turn the player back **On** and the hack is now applied

Limit

DVDA-900

Multi-Region Hack

- **Open** Tray
- Press **10+** on Remote
- Press **5, 3, 6, 7, 5, 1** and then **9**
- **Close** Tray

VCD Hack

- **Open** Tray
- Press **10+** on Remote
- Press **5, 3, 6, 7, 5, 1** and then **8**
- **Close** Tray

Logix

DVD-3000

Multi-Region:

- Press the **Open** button on your Remote Control
- Press the **Setup** button
- Press the **9** button for **Region Free**, or **1** for Region 1, **2** for Region 2, and so on
- Press the buttons **2, 0, 1** and then **0** on your Remote, or if this doesn't work, try pressing the buttons **3, 0, 1** and then **0**
- Press the **Step** button
- Press the **Shuffle** button
- Press the **Next** button

Multi-Region for Older Firmware:

- Press the **Setup** button on the Remote Control
- Press the **Title** button
- Press the **Step** button
- Press the **Next** button
- Using the **Up** and **Down** buttons on the Remote, select the Region of your choice or **Bypass** for Region free
- **Save** and then **Exit** the menu

Firmware Check:

- Press the **Open** button on the Remote Control
- Press the **Setup** button
- Press the **Shuffle** button
- Press the **Step** button
- Press the **Next** button
- A secret menu will appear, inside which you can scroll down until the words **Debug Item** appears, where the current region status is displayed

Low Sound Output Fix:

- Press the **Setup** button on the Remote Control
- Press the **Stop** button
- Press the **Step** button
- Press the **Angle** button

- The word **RFOUT** will appear on screen briefly and the sound will now have been adjusted to normal levels
- A secret menu will appear, inside which you can scroll down until the words **Debug Item** appears, where the current region status is displayed

If any of these codes don't work then you may wish to consider using the code for **Logix DVD-3000D** listed below.

DVD-3000D

Multi-Region:

- Open the players tray and leave it open
- Enter the **Setup** Menu
- Select **Custom** (the last option on the Setup Menu)
- Key in **3, 3, 3, 3** (4 numbers)
- Select your code choice (Press **0** for Multi-Region)
- Press **Enter**
- Press **Setup**

When the play all region options has been selected the player still appears to handle RCE titles such as Crouching Tiger, Hidden Dragon

DVD-3300D

Multi-Region:

- Power **On** the Player
- Press **Open/Close** button on the remote once
- Press **Setup** Button
- Press the **Blue Right Arrow** button **4** times to **Custom Setup** menu
- Press **3** Button 4 times
- Press the **Blue Right Arrow** button **Once**
- Move **Up** and **Down** to select your desired region code, Code **0** represents **Auto-Region**, and press **Enter** button
- Press **Setup** button to save settings

Lumatron

DVD-20K1

Multi-Region:

- Power **On** the player and ensure **No Disc** is in the player
- Push **Setup**, **Stop**, **Skip Back** (|<<) and **Skip Forward** (>>|)
 - A hidden service menu should appear
 - Select **Region ID** then Bypass
 - Press **Play** to select and finish by pressing **Setup**

Luxman

DVD-100

Multi-Region:

- Press the **DVD** button on your remote control
- Press the **Open/Close** button on your remote control
- Place a Region 1 disc in the tray
- Press the **Open/Close** button on your remote control
- Wait until the player ejects the disc, displaying an error message and leaving the tray open
- Remove the Region 1 disc from the tray
- Press the **Open/Close** button on your remote control
- Wait until the display shows the words '**no disc**'
- Press the buttons **Time Search**, **1**, **1**, and **9** on your remote control in order, one at a time
- Press the **Open/Close** button on your remote control
- Place a Region 1 disc in the tray
- Press the **Open/Close** button on your remote control For newer firmware, or if the above method fails to work Repeat steps 1-8 as then before 9 Press the buttons **TV**, **2**, **0**, and **0** on your remote control in order, one at a time Repeat steps 10-12 as before

DVD-470

Multi-Region Hack 1:

- **Always** perform a Cold Start before applying the hack
- Power **On** your player whilst pressing hold both the **Play** and **Stop** buttons on the front player
- After a short while you should be presented with a set of language options. **Release** the Play and Stop buttons on the player
- You will now need to select a language option between 1 and 6

Multi-Region Hack 2:

- Press the **Repeat** button on the Remote Control
- Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**

- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on the Remote Control for Region free, or **1** for Region 1, **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on the Remote Control

If the player sticks on FBI Warning screens:

- Press **Forward Search** x2 or faster, the disc should skip straight to the main feature

Marantz

DVD-890

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed to

Region One Hack:

- Press the buttons **Play, 2, 7** and **4** on your remote control. The onscreen display should look like this: ' ____ ____ '
- Using the number keys on your remote control, enter the code **005000128156**
- Press the **Play** button on your remote control
- The onscreen display should turn red, indicating that your region settings have been changed

Return to Region Two Hack:

- Press the buttons **Play, 2, 7** and **4** on your remote control. The onscreen display should look like this: ' ____ ____ '
- Using the number keys on your remote control, enter the code **002000128156**
- Press the **Play** button on your remote control
- The onscreen display should turn red, indicating that your region settings have been changed

Factory Reset to Region Two:

- Press the buttons **Play, 1, 5** and **9** on your remote control. The onscreen display should look like this: ' ____ ____ '
- Using the number keys on your remote control, enter the code **00400100014 0**
- Press the **Play** button on your remote control
- The onscreen display should return to the original Philips splash screen, all settings will be reset back to factory defaults

DV-3100, DV-4200FN, DV-6200

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed to

Multi-Region:

- Turn **On** without a disk in the tray and wait for "**No Disk**" on front panel display
- Key in on the Remote Control, press **Pause**, then **3, 1, 4, 1, 5, 9**
- The word **COdE** is displayed on the front panel
- Key in the number of the Region you want to use, or **0** for Multi-Region
- Then press **Pause** again

DV-4000

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed to

Multi-Region:

- Turn **On** the player with no disc in the tray
- Press **Dimmer** (on front panel)
- Press **Previous** (on front panel)
- The display should show 4 dashes
- Press **1, 9, 9** and **9**
- Enter **01** for Region 1, **02** for Region 2, **04** for Region 3, **08** for Region 4, **10** for Region 5, **20** for Region 6 or **00** for Region free
- Press **Enter**
- Turn power **Off** and **On**

DV-4100

Multi-Region:

- Send the infra-red code **RC6** (aka **Codeset 4, Key 235**) to your player. You can do this with a **OneForAll** remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions:
- - Configure the Remote using the setup code **0539**
 - Press the **Magic** button
 - Enter the code **085**

If you own a Palm Pilot, you may also use Pacific Neo-Tek's OmniRemote software to generate the **RC6** code using a downloadable .pdb file.

- Download the .pdb file into your Palm Pilot
- Press the OmniRemote key marked as 955 Multizone
- The onscreen display should show **11** spaces like this: '-----'
- Using the number keys on your DVD player's Remote Control, enter the code **222 222 005 255**. Note that this is 12 digits and the last digit will not show on the on-screen display
- Press the **Play** button on the DVD player's Remote
- The onscreen display should now show the words **No Disc**
- Power **Off** your DVD player, wait 10 seconds and then power back **On**

DVD-7000

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed to

Multi-Region:

- Turn **On** the player with no disc in the tray
- Press **Next** (on front panel) and **Previous** (on front panel) **at the same time**
- The display shows Region 2
- Press **Stop** (on front panel) for 5 seconds
- The display now shows Region 0
- Press **Play** (on front panel)
- The display should show Region 0 OK
- Turn power **Off** and **On**

Matsui

DVD-110

Multi-Region Hack 1:

- Press **9** on the remote
- Press **Open/Close** on the Remote, the tray should not open though
- Press **5** on the remote
- Press **Mute** on the remote, this should bring up the **Region Selection** page
- Press **Ok** then **Exit**
- The word **ALL** should appear and you will be able to play discs from any Region

VCD Hack 1:

- Place **ANY** CD in the players tray
- Press **Stop** button on the Remote
- Press **Menu**
- Press **9**

- Press the **1-ALL** button
- Press **Open/Close**
- This should take you into a menu from which you can enable VCD playback

Multi-Region Hack 2:

- Press the **Menu** button on the Remote
- Press the **1, 6** and **7** buttons
- Press the **Mute** button

VCD Hack 2:

- Press the **Open** button on the Remote to open the drive tray
- Place an audio CD in the drive tray
- Press the **Open** button on the Remote to close the drive tray
- Press the **Menu** button
- Press the **1** button
- Press the **Index (1-All)** button
- Press the **Open** button
- Press the **1** button

DVD-120

Multi-Region:

- Perform **ALL** functions on the players front panel, **NOT** from the Remote Control
- Turn the machine on
- Press **Stop, Skip** and **Open** at the same time and hold for a few seconds
- A Menu will appear
- Select the region you want and play your disc

DVD-122, DVD-125

Multi-Region:

- Power on the DVD player and ensure there is no disc in the drive
- Press **Menu**
- Then press **1, 6, 7** and press **Mute** for ALL Regions
- Press **Exit**

Disable Macrovision:

- Insert a DVD
- Press **Stop, Bookmark** and **Menu**
- Press **5, 9, 7** then **Exit**

VCD Hack:

- Insert a music CD
- Press **Stop, Menu, 1, Bookmark, Open**
- This will give you the option to enable or disable VCD playback

DVD-225

Multi-Region:

- Power **On** the unit and **Open** the tray
- Press **3, 4, 9, 7, 3** and **4** on the remote
- Press the required region, i.e. **1** for region 1 etc, or **0** for region free

DAV-50,DAV-70

Multi-Region:

- **Open** the tray
- Press **8, 1, 3, 2** and **8**
- The region menu will appear
- Press **Enter** until region **9** is selected and press **Play**
- The unit will now be multi region

VCD Playback:

- **Open** the tray
- Press **0, 0, 0, 0** and **1**

Manhattan

DVD-300

Multi-Region:

- Switch **On** the player
- Press **Open** and **Setup**
- Press **9** for region free or **1** for region 1, **2** for 2 region 2 etc.
- Press **3, 0, 1, 0**
- Press **Step, Shuffle** and **Next**

USL-2

Multi-Region:

- Switch **On** the player
- Press **Set-up**
- Press **9, 1, 1, 1** and **1**
- Press **Step, Shuffle** and **Next**

DVD-2000

Multi-Region:

- Press **Stop** until the display reads 'stop or 'no disk'
- Press **Setup, Title, Step** and **Next**
- Use the secret menu that appears to select a region
- Press **Setup**

Medion

MD-4310

Multi-Region:

- Press the **Open/Close** button on the Remote Control
- Press **Setup**
- On the Remote Control, press the **1** button for Region 1, **2** for Region 2, and so on, or **0** for multi-Region playback
- Press **Pause**
- Press **Step Back**
- Press **Step Forward**
- Press **Setup**

MD-4358

Multi-Region:

- Power **On** the player and **Open** the tray
- Press **1, 3, 6, 9** and **0**
- The player should now be region free

MD-4419

Multi-Region:

- Power **On** the player
- **Open** the players drawer
- Go to the **Custom Setup** menu
- On the Remote Control key in **3, 3, 3** and **3**
- A secret menu will appear
- Choose the desired region code or choose **0** for Region free

MD-4883

Multi-Region:

- Make sure the tray is empty and power **On** the player
 - **Open** the tray
 - Press **1, 3, 6, 9** and **0**

- The player should now be region free

MD-6435

Multi-Region:

- **Open** tray and press **Clear** button
- Press **1, 3, 6, 9**, and **0** for code free
- **Close** tray and turn **Off**

MD-7888

Multi-Region:

- Put the player into **Standby** with no disc in the tray
- Power **On**, **Menu**, **9**, **Open/Close** and **5**
- A service menu will now appear enabling you to change the region

MD-40205

Multi-Region:

- Press **Open** then **Clear**
- Press **1, 3, 6, 9** and **0**
- Press **Close**

MD-7950A

Multi-Region:

- Switch the player **On** at the base unit
- **Open** the drawer and **leave** open
- Using the handset type in **8, 9, 2, 6** then the required region code (**1** for R1, **2** for R2 and so on...)
- **Close** the drawer with the required DVD in
- Press **Play**

Memorex

MVD-2027A. MVD-2028

Multi-Region:

- Press **Open** and then **Clear**
- Enter **1, 3, 6** and **9** (no menu on the screen is visible)
- Enter **0** for All region, **1** for Region 1, **2** for region 2 etc

Mico

ST-120

Multi-Region:

- **Open** tray and press **2, 8** and **1**
- A hidden menu will appear
- You can turn VCD on and off plus change region code. Select **0** for all regions

Classica-20

Multi-Region:

- Key in on the Remote Control **2, 9, 1** and **8**
- Press the **Enter** button
- You should now be in a hidden menu where you can change the Region to **1** for Region 1, **2** for Region 2, and so on, or **13** for multi-region playback

DVD-A980

Multi-Region:

- Press the buttons **7, 7** and **Select** on the Remote control
- You should now be in the service menu
- Change the Country Code to **13** for Multi-Region, which is auto switching even on Hard Coded DVD discs
- To disable Macrovision change the **0** to a **1**

DVD-808, DVD-1028

This hack may work on most **Mico** DVD players.

Multi-Region:

- **Open** drive tray,
- Press **2, 8, 1, 2**, and then **Enter**
- You should now have the Secret menu up on the screen
- Continue to press **Enter** and you can select the region you want from **1**
- **Close** drive tray door when finished

Minato

DVD-G1

Multi-Region:

- Press the **Open/Close** button on the Remote Control to open the drive tray
- Press the buttons **0, 1, 1** and then **1** on your remote control, in order, one at a time
- A number of **stars** should appear in the top left hand corner of the onscreen display
- Press the button **1** on your Remote Control to select Region 1, or **2** to select Region 2, and so on...
- The word **Region** and then the number you selected should briefly appear on screen to confirm that the hack has been successful, however this may not be the case on some models

Note:- This hack may not work on machines with up to date firmware, although if it doesn't display the stars it doesn't necessarily mean it hasn't worked.

Mustek

DVD-V300

Multi-Region:

- Turn **On** the player with no disc in the drive
- Using the remote press **Set-up**
- On the front panel press **Next, Stop, Pause/Step, Previous** and **Next**

DVD-V520, DVD-560, DVD-V562

Multi-Region:

- Turn **On** the player with no disc in the drive
- Press **Set-up, Previous, Next, Previous, Next, Previous**
- Press the **Right** cursor until **255** appears
- Press **Set-up**

If the above hack fails to work then you may wish to consider using attempting the **DVD-V300** hack above

Disable Macrovision:

- Press **Set-up, Next, Previous, Next** and **Previous**
- Press **Up** and **Left** - you should see **4000**
- Press **Up** and **Left** until you see **3000**
- Press **Set-up**

DVD-V600RZ

Multi-Region:

- Turn **On** the player and open the disc tray
- On the remote press **8, 4, 2** and **1**
- This should bring up a service menu
- Press **Enter** to move through the region codes or **9** to enable region bypass

Nakamichi

DVD-10

Multi-Region:

- Connect the machine to the mains but **do not** power on, also ensure there is no disc inserted
- Press and hold down both the **Dimmer** and **Reverse Skip** buttons on the front panel and then press the Power ON
- The display should show "NAKAMICHI"
- Hold the **Dimmer & Reverse Skip** buttons for a few seconds and the Display should change to "____ _" from "NAKAMICHI". Wait for a minimum of 5 seconds (at this stage you're **not** pushing the **Dimmer & Reverse Skip** buttons any longer), then using the handset's numerical keys press **1, 9, 9, 9**
- The display should now show: **A-00 D-??**, Where D-?? indicates the present region
- To change the region code, punch in the new code (i.e. 01 for Region 1, 03 for Region 3, etc.) and after that press the **Enter** button (located next to the numbers keypad on the Handset). The display should now change (slowly) to D-01 (or whichever new region you have assigned to, as above)
- Completely Power **Off** and the machine is set to the new Region.

Note: This also works as a region **0** hack, but be aware that some discs may refuse to play unless the region you have selected matches the region of the disc. The hack is also indefinite and has no limited lifespan, and can therefore be performed as many time as required

SoundSpace 10, 11, 12, and 21

Multi-Region:

- Press and **hold** the **Track Down** button on the player
- Press the **Power On** button to turn on your player
- Wait until the machine shows "----" on the display
- **Release** the **Track Down** button on the player
- Using the main remote keypad, enter the digits **1, 0, 1** and **1**, then press **Enter**

The machine should now display "**D-00**" and be region free

Nakio

N2051

Multi-Region:

- Press **Set-up**
- Press **Stop**
- Press Skip **Back**
- Press Skip **Forward**
- A hidden menu will appear
- Scroll down **Regions** list (I think there were 9) "to bypass regions"
- Switch **Off** machine
- Switch back **On**

Narita

T1011

Multi-Region:

- Press **Power On**
- Press **Open/Close**
- Press **Setup** on the remote
- Setup menu will appear key in **4, 9, 5, 4** and **0**
- A version row will now appear
- Select version and set the region **0** for all regions

T1030, T1130

Multi-Region:

- Press **Power On**
- Press **Open/Close**
- Press **Setup** on the remote
- Setup menu will appear key in **4, 9, 5, 4** and **0**
- A new version row will now appear
- Select version and set the region **0** for all regions

NAD

L55

Multi-Region:

- Set the remote control to **DVD**
- Press **Pause** on the remote
- Key in the numbers **3, 1, 4, 1, 5** and **9** on the remote
- The onscreen display should now show "**Code --**"
- Enter the code **01** for Region 1, **02** for Region 2, and so on, or **00** for multi-region mode
- Press **Pause** on the remote
- Turn **Off** player for **30** seconds
- Turn **On** player

L70

Multi-Region:

- Use remote control switch the player **On**
- **Open** tray using the **Eject** button
- Press **Program** button then **2, 5, 1** and **9**
- The presently active code is now displayed
- Enter desired code i.e. 1 for region press **1**, press **2** for region 2 etc
- Press **Disp** button
- Switch player **Off** then **On** again

T531, T571

Multi-Region:

- Switch the unit on
- Press **Pause**
- Key in **3, 1, 4, 1, 5, 9**
- The word **Code** appears in the display
- Press **0**
- Press **Pause**
- Switch off and back on again

If the above code fails to work then once the player has displayed the "No disc" message press **Stop** before entering the above code. If this still fails to work then you could try the following alternative method.

- Press **Setup** on the remote
- Highlight the **TV Aspect** option.
- Place the cursor over the **16:9 Wide** option
- Press **1, 3, 9, 7, 1, 3, 9** followed by **Enter**

Beware, although the code is not listed here, there are reports that entering a code to enable VCD playback may result in the players firmware becoming corrupted thus making the player unusable. The above hacks may not work on all versions of firmware.

T550

Multi-Region:

- Ensure the tray is **Open**
- Go to the **Set-up** menu
- Go to **Password** and press **Enter**
- Enter the code **5, 9, 7** and **8**
- Press **Enter**, a block with **SVC Code** will appear
- Key in **9, 2, Audio, Resume** and **Enter**
- The block will now show **Region Change 0000**
- Select the Region by entering: **5, 5, 0, *** where * = the Region code, Region 1 = **5501**, Region 2 = **5502** etc.
- Press **Enter**.
- The player draw will close and the machine will switch itself into standby

T562

Multi-Region:

- Power **On** machine and ensure the tray is **Closed**
- Using the remote go to **Settings** menu via **Set-up**
- Enter **7, 4, 1, 1, 3** and **0** in quick succession
- A menu labelled **Region Set-up** should now appear
- Using remotes navigation keys select required region, or region free
- Press the **Enter** button
- Turn **Off** player
- Turn DVD player back **On**

If the above fails to work then an alternate method is as follows:-

- Power **On** machine and ensure the tray is **Closed**
- Using the remote go to **Settings** menu via **Set-up**
- Enter **5, 6, 2**, and region number required, i.e. **1** for region 1, **2** for region 2 etc
- The message **Load default AH setting** will briefly appear
- Turn **Off** player
- Turn DVD player back **On**

NEC

NDV-21, NDV-22, NDV-23, NDV-24,NDV-100

This hack may also work on most other NEC DVD players

Multi-Region:

- Make sure there is no Disc in the unit when you turn it on
- Press **Pause** on the remote
- Key in **3, 1, 4, 1, 5** and then **9** on the remote
- The word **Code** should appear on the screen
- Press the number for the required region (**0** = multi-Region)
- Press **Pause**
- Turn the unit off then back on and you're good to go

Note:- Some new discs use enhanced regional coding which may not work with the "0 for all" setting. In this case use the specific code for the Region of the

Norcent

DP-300

Multi-Region:

- Using remote **Eject** the disc tray and leave it **Open**
- Press **8, 8, 8** and **8**
- Press the **Setup** and **Next**
- The factory control page will appear where you can select **All** or **0** for region-free play

Pacific

DVD-750, DVD-1000

Multi-Region Hack 1:

- Press **Open/Close** to open the players tray
- Key in **8, 4, 2** and **1** on the Remote Control
- Press **Enter** to cycle through the Regions or press until **9** appears for Region free operation
- Press **Open/Close**

Multi-Region Hack 2:

- **Open** the players drawer
- Key in **9, 9, 9** and **9** on the Remote Control
- The player should now be Region free

Macrovision Hack:

- **Open** the tray
- Key in **4, 5, 6, 1** and **0**
- Press **Enter**
- Macrovision should now be disabled

DVD-900

Multi-Region Hack

- Press **Open/Close**
- Press **Clear**
- Press **1, 3, 6, 9** then required region number or **0** for region free

DVD-1002

Multi-Region Hack 1:

- Press **Setup**
- Press **1** for Region 1, **2** for Region 2 etc, or **7** for Bypass
- Press **Pause/Step, Previous, Next** and **Setup**

Multi-Region Hack 2:

- Press **Open/Close**
- Press **Clear**
- Press **1, 3, 6, 9** then required region number or **0** for region free

Note:- The above hacks may not work on newer versions of the machine and should be attempted immediately after plugging the unit in

Macrovision Hack:

- **Open** the tray
- Key in **4, 5, 6, 1** and **0**
- Press **Enter**
- Macrovision should now be disabled

Panasonic

A112, A120, RP-56, RV-31, RC-HT80

Multi-Region:

- Power **On** the player
- **Open** the tray
- Press **9, 8, 1, 7** on the remote
- Press **Enter** until the display indicates **Region 9**
- Press **Return**

RV-32

Multi-Region:

- With **No** disc in tray press **Stop, Stop** and **Set-up**
- Press **3, 8, 8, 8, 3** and required region. Use **0** for zone free

DMR E-30

Multi-Region:

- Turn **On** player with no disc inserted
- While pressing **Shift** on the remote press **Setup**
- Press **Enter** twice
- Move the cursor to **Other**
- Enter the appropriate four-digit region setting, beginning with 000
- Press **Enter**
- Press **Return** twice
- Switch unit **Off** for at least 3 seconds

SC-DK2

Multi-Region:

- Turn **On** player with no disc inserted
- While pressing **Shift** on the remote press **Setup**
- Press **Enter** twice
- Move the cursor to **Other**
- Enter the appropriate four-digit region setting, beginning with 000
- Press **Enter**
- Press **Return** twice

- Switch unit **Off** for at least 3 seconds

Philco

DV-P2000

Multi-Region:

- Ensure there is no disc in the tray and that the tray is closed
- Press **Stop**
- Press **Stop**
- Press **Setup**
- Then key in the following **3, 8, 8, 8, 3**
- Followed by the Region you wish your player to play

PH-5000, PH-5100, PH-7000, PH-9000

Multi-Region:

- **Open** the players tray
- Press **8, 9, 2, 6** ("*" will be seen on the screen)
- Then select Region (**1 to 6**) or "**0**" for Region free
- Press **Play** (the tray will close)

Notes:

- If you key in **8, 9, 2, 6, 7** the Firmware version will be shown.
- If you key in **8, 9, 2, 6, 7** all settings will be returned to default

PH-7100, PH-9100

Multi-Region:

- Turn the player **On**
- Press **Eject** on the Remote Control
- Press **7, 4, Enter** (Some Remotes use the "**Select**" key)
- Set **Country Code** to **13** then **Enter**
- Press **Play**
- Put a DVD in the tray
- Press **Play**

Macrovision Hack:

- Turn the player **On**
- Press **Eject** on the Remote Control
- Press **7, 4, Enter** (Some Remotes use the "**Select**" key)
- Go to next page
- Set **Macrovision** to **0**

PH-7300

Multi-Region:

- Press **Setup**, **Pause/Still**, **Previous** and **Next**
- A service menu will be displayed
- Select **Region** then **Bypass**

PH-7500

Multi-Region:

- Turn **On** player
- Press **Eject** on remote control
- Press **8, 4, 2** and **1**
- This accesses the region code and Macrovision page where you can select and set the **Country Code**. Select **9** for multi-region
- Press **Select**
- Put a DVD in the tray and press **Play**

Philips

General

Multi-Region Hack 1:

This hack should work on all Philips DVD players as of **06/01/2001** with any firmware version, and other similar models by manufacturers such as **Grundig**, **Marantz** and **Yamaha**. If the hack fails to work then check the sections below to see if your player is listed.

- Send the infra-red code **RC6** (aka **Codeset 4**, **Key 235**) to your player. You can do this with a **OneForAll** remote such as the **OneForAll 6** (or URC7560) or **OneForAll 4 Digital** with the following instructions:
 - Configure the Remote using the setup code **0539**
 - Press the **Magic** button
 - Enter the code **085**

If you own a **Palm Pilot**, you may also use *Pacific Neo-Tek's OmniRemote* software to generate the **RC6** code using a downloadable .pdb file.

- Download the .pdb file into your Palm Pilot

- Press the OmniRemote key marked as 955 Multizone
- The onscreen display should show **11** spaces like this: '-----'
- Using the number keys on your DVD player's Remote Control, enter the code **222 222 005 255**. Note that this is 12 digits and the last digit will not show on the on-screen display
- Press the **Play** button on the DVD player's Remote
- The onscreen display should now show the words **No Disc**
- Power off your DVD player, wait **10** seconds and then power back on

Multi-Region Hack 2:

You may also use the following methods for players with firmware 6.2:

- Turn your DVD player **On**
- The display will show you **no disc**
- Press **Play** and then press **1, 5, 9** on the DVD Remote
- On DVD display will appear -----
- Key in **101 040 000 140** on the Remote when you press the last digit you will see a little point
- Press **Play**
- The player will be turned off
- Your DVD is ready

DVD-634, DVD-640

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed

Multi-Region:

- **Open** the tray
- Press **0, 0, 0** and **0** on your remote control
- Press **0** for region free or **1** for region 1, **2** for region 2 etc.
- To check region **Open** the tray and press **Display** on the remote

DVD-700, DVD-825, DVD-170

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed

Region One:

- Press **Play, 2, 7** and **4** on the Remote Control. The on-screen display should then look like this: '_____'.
- Enter the following code using the Remote Controls number pad **005000 128 256**.
- Press the **Play** button on the Remote Control.

- The onscreen display should turn red, indicating that your region settings have been changed.

Region Two:

- Press **Play**, **2**, **7** and **4** on the Remote Control. The on-screen display should then look like this: '____ ____'.
- Enter the following code using the Remote Controls number pad **001000 128 156**.
- Press the **Play** button on the Remote Control.
- The onscreen display should turn red, indicating that your region settings have been changed.

DVD-703

NOTE: Please note that this conversion may only work a maximum of 25 times! After this time the machine may end up locked to the last region changed

Multi-Region:

- Press **Play** on the Remote, followed by **1**, **5** and **9**
- When the display reads '_____' enter **005 000 128 156** using the Remote. (**Note:** the 12 digit code, when there are only 11 spaces. This is normal, just enter the whole code, and press **Play**)
- Press **Play** on the Remote
- Your player is now a Region 1 only player

Restore to Region Two:

- Press **Play** on the Remote, followed by **1**, **5** and **9**
- When the display reads '_____' enter **002 000 128 156** using the Remote (**Note:** the 12 digit code, when there are only 11 spaces.. This is normal, just enter the whole code, and press **Play**)
- Press **Play** on the Remote
- Your player is now a region 2 & 4 only player

DVD-704

Multi-Region:

- Power **On** the player with no disc in the drive
- Press **Pause** on the Remote
- Enter **3**, **1**, **4**, **1**, **5** and **9** on the Remote (the word **COdE** appears on the display)
- Enter **0** on the Remote (**0** = All Regions, **1** = Region 1, **2** = Region 2, etc.)
- Press **Pause** on the Remote
- Power the player **Off** and then back **On**

Firmware Display:

- Press **Setup** on the Remote
- Select **TV Aspect**
- Place the cursor on **16:9 wide**
- Enter **1, 3, 9, 7, 1, 3** and **9** on the Remote
- Press **Enter** on the Remote
- Press **Setup** to clear the information once read

DVD-707, DVD-710

Multi-Region:

- Power **On** the unit
- Using the remote press **Setup**
- **Open** the tray
- On the remote press **8, 4, 2** and **1**
- The current zone of the player will be displayed on the screen.
- Press **Select** on the remote and zone 9 will be displayed on the screen
- **Close** the tray
- The player should now be region free

DVD-724, DVD-736K, DVD-762

Multi-Region:

- Power **On** the unit and **Open** the tray
- Slowly press **1, 1, 1** and **1**
- Press **0**
- The display should now indicate "Region 0"

DVD-625, DVD-628, DVD-728

Multi-Region:

- Power **On** the unit and **Open** the tray
- Slowly press **9, 9, 9** and then **9**
- Press **0** for region free
- **Close** tray

DVD-630

Multi-Region:

- Turn **On** the player
- **Open** the tray
- Press the following sequence on the remote: **7, 8, 9, OK** and **0**
- The number **0** will appear on the lower left side of your screen
- Your player is now region free

Note: The **0** in the sequence above represents the region code. **0** = region free. If you want to change your player to just a specific region code, replace the **0** with the region number you want

DVD-730

Multi-Region:

- Power **On** the player and press **Play**
- Enter the code **274 159**
- The player's display should now indicate " _____ "
- Enter the code **222 222 005 255** and press **Play**
- The screen should now go **Red**
- Leave this display alone for at least **20** seconds
- Turn the player **Off** at the **Mains** switch (**not** Standby)
- Wait **10** seconds and then power **On**

DVD-865AT

Multi-Region:

- Turn your DVD player **On**
- The display will show you **no disc**
- Press **PLAY** and then press **1, 5, 9** on the DVD Remote
- On DVD display will appear -----
- Key in **101 040 000 140** on the Remote when you press the last digit you will see a little point
- Press **PLAY**
- The player will be turned **Off**

DVD-870P

Region One:

- Press **Play** on the Remote Control
- Key in **1, 5, 9**
- Now key in **005 000 128 156**

Region Two:

- Press **Play** on the Remote Control
- Key in **1, 5, 9**
- Now key in **013 000 128 156**

DVD-880R

Multi-Region:

- Press **Play** on the machines fascia
- Key in **1, 5, 9**
- The player should now be region free

DVD-950

Multi-Region:

- Power **On** the player and remove any discs
- When the player indicates **No Disc** press **Play, 1, 5** and **9**
- The display will change to show 11 dashes
- For **Region 1** press **005000128156** (12 digits)
- For **Region 2** press **002000128156** (12 digits)
- Press **Play**
- The screen will now go **Red** and then reset

DVD-953

Multi-Region:

- Power **On** the player and press the **System Menu** button
- Select **TV Aspect** and place the cursor over **16:9**
- Press **1, 3, 9, 7, 1, 3, 9** and then **OK**
- Press the **System Menu** button to exit

DVD-Q30, DVD-Q35, DVD-Q40, DVD-781

Multi-Region:

- Power **On** the unit ensuring its connected to a TV (OSD on TV is required)
- Press **Open/Close** to open the tray
- From the Remote enter **1, 1, 1, 1**
- Press **0** (Country Code)
- Press **Open/Close** to close the tray and the process is complete

MX-1060D, DFR-1600

Multi-Region:

- Press the **System** button on the Remote Control
- On the Remote Control key in **1, 6** and **7**
- A box will appear requesting a new Region be entered
- Key in **1** for Region 1, **2** for Region 2 and so on, for Region free operation press **Mute**

Ix3750w and MX3700D

- Start up the player (in disc mode) with no disc in the tray.
 - Press Play on the player.
 - Press 159 023 793 90 on the remote.
 - Press Play on the remote.
- You'll see a message flashing on your screen, saying something like "DVD player has been set to region 0"
- When the image on the TV returns, power down the player.
 - Wait 10 seconds.
 - Start up the player again

Proline

DVD-150HT

Multi-Region:

- **Open** drive tray
- Using remote press **9, 8, 1** and **7**
- The service menu will be displayed
- Select required region by pressing **1** to **6** on your remote or **9** for multi-region. Macrovision can also be disabled from this menu

DVD-1000

Multi-Region:

- **Open** the DVD player tray
- Place a Region 1 disc in the tray, but don't close it
- Press the buttons **0, 1, 2** and then **3** on your remote control in order, one at a time
- Press the **Play** button on either your remote or the player

Restore to Region Two:

- **Open** the DVD player tray
- Place a Region 2 disc in the tray, but don't close it
- Press the buttons **Return** and then **Play** on your remote control in order, one at a time

Note: Freezes with RCE discs. No known problems with models using new firmware made available in January 2000. Earlier firmware versions will not play The Matrix and require an upgrade, this does not remove the hack.

DVD-2000, DVD-2500

Multi-Region:

- Press **Menu** on the remote control
- Press **1, 6, 7** followed by the desired Region number, or press **Mute** for Region free
- Exit the menu

This hack only works as long as the player is plugged into the mains. Once power is lost the handset hack requires to be re-entered.

VCD Hack:

- Insert a music CD
- Press **Menu** and **5**
- Press **Eject** (tray should remain closed)
- Press **1** and **Index Menu**
- Press **Eject** (tray should remain closed)
- You should now see a menu where you should select **1** to enable VCD playback

Note: Freezes with RCE encoded discs. No known problems with models using new firmware made available in January 2000. Earlier firmware versions will not play The Matrix and require an upgrade, this does not remove the hack

Prosonic

DVD-5000

Multi-Region:

- Power **On** the player and ensure **No** disc in the player
- Press **Eject**
- Press **8, 8, 8, 8** and **Setup**
- Press **Foward/Next** (>>|)
- You are now in the service menu
- Select the required region or make it region free
- Finish by pressing **Ok**

Pioneer

DV-37

Multi-Region:

- Turn **On** unit and remove any disc in the tray
- Press the **Setup** button on the remote control.

- Move over to **General** using the arrow keys
- Select **Basic**
- Press **Display** - this will display your region and firmware version.
- Press **Condition/Memory** (nothing is displayed or changed on the screen)
- Press the **Region #** required (i.e. 2 for Region 2 etc)
- Press **Menu** to store

DV-333

Multi-Region:

- Turn **On** with no disc in
- On the remote control, press **Setup**
- Select **General** (certify that the Setup is on Basic).
- Press **Display**
- Press **Condition**
- Choose region code and quit Setup

DV-343, DV-444, DV-505, DV-530, DV-535, DV-606, DV-626, DV-717, DVL-909, DV-C302D, DV-K101, XV-HTD510

Multi-Region:

- Turn **On** unit and remove any disc in the tray
- Press the **Setup** button on the remote control.
- Move over to **General** using the arrow keys
- Select **Basic**
- Press **Display** - this will display your region and firmware version.
- Press **Condition/Memory** (nothing is displayed or changed on the screen)
- Press the **Region #** required (i.e. 2 for Region 2 etc)
- Press **Menu** to store

Redstar

DVD-229A

Multi-Region:

- Power **On** the player and **Open** the tray
- Press **Stop, 1, 9, 9** and **9**
- A service menu will be displayed
- Using the **Enter** and **Arrow** keys change the region code
- **Close** the tray

DVD-229C

Multi-Region Hack 1:

- Power **On** the player and **Open** the tray
- Press **3, 3, 0** and **8** followed by the required region code, (**0** is code free)

Multi-Region Hack 2:

- Power **On** the player and **Open** the tray
- Press **2, 1, 6, 8** and **Enter**
- Enter the required region code, **0** for region free, **1** for region 1, **2** for region 2 and so on.

Reoc

A3

Multi-Region:

- Turn the player **On**
- Press the **Open/Close** button to open the disc drawer
- Enter the password(s) **8, 4, 2, 1** or **9, 9, 9, 9**, you will then see the current region code on the screen
- Select a Region code by pressing **Enter** continuously. The Region free code is **9**
- Press the **Open/Close** button again to close the disc drawer
- The process of selecting a Region code is now completed

VCD Hack:

- Turn the player **On**
- Press the **Open/Close** button to open the disc drawer
- Enter **5, 1, 6** and **8**
- Screen will now report that VCD playback is possible

A5

Multi-Region:

- Open a text editor and start with a new blank page. Type the exactly the following:

TSDVDREG-2001-8608201-R0

- Select **File, Save** and call the file **CREGIN.TXT**
- Using your CD Burning software, burn this file to a CD-R or CD-RW

- Insert the freshly made disc into the A5 DVD player and after a short while **R0** will appear on the front title screen

This hack has been taken from <http://reoc.keyservice.co.uk/>. I would recommend visiting the above site for further information on the 'hack'.

A6

Multi-Region:

- Press the **Open** so the tray is ejected
- Press the **Setup** to enter the setup menu
- Press **1, 3, 6, 9, Left, Left, Left, Right**
- The player will show a **Version Setup** item in the menu
- Press **Step, Previous, Next**
- The player should now be multi-region

Roadstar

DVD-2020H

Multi-Region:

- **Open** the drive tray and enter **9, 8, 1** and **7** on the remote keypad
- You will then be into a hidden menu
- Choose regions **1-6** or **9** for region free and press **Select** button

DVD-2025H

Multi-Region:

- **Open** the DVD door and press **Open/Close**
- Type in the code **3, 3, 0, 8, 8**, and **0**
- You will see **R0** on the screen then **Close** the DVD door by pressing **Open/Close**

DVD-2027H

Multi-Region:

- **Open** the drive tray and make sure there's no DVD in
- Enter **9, 8, 1** and **7** or **8, 4, 2** and **1** on the remote keypad
- You will then be into a hidden menu where you can choose regions **1-6** or **9** for region free and **Select**
- **Close** the tray and power the player **Off** for few seconds
- Turn it **On** again

DVD-5104PSPK

Multi-Region:

- **Open** tray
- Press **Volume Up** for **2** seconds
- Press **Languages**
- A menu will be displayed
- Press **Arrow down** to scroll
- Select **0** for region free
- Press **Enter**

Ronin

DVD-215

Multi-Region 1:

- Press **Setup** on remote control
- Enter **1, 3, 6, 9, 8, 8, 8** and **8**
- Select **Version** from the menu by pressing **Enter**
- On **Regional Code** press **Right (>)** button
- Use **Down** button to change region to **0**
- Press **Enter** on remote control to save

Multi-Region 2:

- **Open** tray and press **Setup**
- Enter **9, 7, 3** and **5**
- Select **Region** and set to **0**
- **Exit** Setup Menu

AMW-280

Multi-Region:

- Make sure there is **no** DVD in the machine
- Press **Setup** button
- Press **Right** arrow **three** times to enter preferences
- Enter **1, 3, 7** and **9**
- This will take you into the multi region menu
- Press arrow **Up** or **Down** to Region **0**
- Press **Play** or **Enter**

Rowa

DVD-280, DVD-3610

Multi-Region Hack 1:

- Press **Open/Close**, **Zoom**, **A-B**, **Up**, **Left**, **Down** and **Right**

Multi-Region Hack 2:

- Turn the player **On** without a disc in and leave disc tray **Open**
- On the remote press **Set-up**
- Use **Right** arrow to select **General** then **Basic**
- Press **Enter** on the remote followed by **Display**
- You should see the region code and the OSD version that the player is set to
- Press **Condition/Memory** on the remote
- Press **1**, **2**, **3**, **4**, **5** or **6** to change the region code
- Press **Display** to set the new region
- Press **Set-up** on the remote to exit

DVD-800

Multi-Region:

- **Open** tray and press **8**, **4**, **2** and **1** or **2**, **1**, **6** and **8**
- Press **Enter** to set region - region **9** is all regions
- To exit the region set menu just press **Open/Close**

Samsung

HT-DM150, HT-DM550

Multi-Region:

- Switch **Off** player and **Unplug** from mains wait 30 seconds
- Reconnect to mains
- Turn **On** player with remote
- Press **Enter** on the remote
- Press **8**, **4**, **2**, **6** and **9** on the remote
- Press **Enter** on the remote
- The tray will **Open** and player will power **Off** and **Close** tray
- Switch **On** power from remote
- Player is now Region Free

DVD-M107

Multi-Region:

Multi-region Codes 1

- Perform a cold start

- Power **On** the player and press **Play** and **Next** on the DVD player (note that that you can also press **Play** and **Next** on the Remote Commander)
- The language options pop up. Release the **Play** and **Next** buttons
- Select the language between **1** and **6**

Multi-region Codes 2

- Press the **Repeat** button on the Remote Commander
- Using the Remote Commander, enter the code below corresponding to the region that your player is currently set to
 - for Region **1** use: **2, 9, 3, 3** and **4**
 - for Region **2** use: **3, 8, 7, 6** and **7**
 - for Region **3** use: **5, 6, 7, 3** and **2**
 - for Region **4** use: **7, 6, 8, 8** and **4**
 - for Region **5** use: **5, 3, 8, 1** and **4**
 - for Region **6** use: **2, 4, 4, 6** and **2**
- The current region setting of your player will display on the screen of the TV
- Press **9** on the Remote Commander for a Region free setting
- Press **Open** and load a DVD (of a region setting that your dvd player could not play previously).
- **Stop** and power **Off**

DVD-S124

Multi-Region:

- Leave disc tray empty.
- Power **Up** player.
- Press **Play** and **Stop** on player simultaneously for around 3 seconds
- A language screen should appear.
- Press **Repeat** on remote then **7, 6, 8, 8** and **4**
- Press **9** for region free player.
- Press the **Open** button on player.
- After 15 sec press **Power/Standby** on remote.

DVD-S224

Multi-Region:

- Turn on the player and ensure that there is no disc in the machine
- Using the remote, in quick succession press **Menu, Repeat**
- Press **7, 7, 6, 8, 8, 4, 9** then **Open/Close**
- Count up to fifteen before powering off the player with the remote

If the above code fails to work then you may want to try the following code:-

- Press the **Repeat** button on your remote control NB: Do not confuse this with the Repeat A-B button
- Press the buttons **5, 7, 5, 3** and **8** on your remote control, in order one at a time
- The numbers **02** will be displayed on the top left of your onscreen display
- Press the **1** button on your remote control for region 1, **2** for region 2, and so on, or **9** for multi-region playback
- Press the **Open** button on your remote control
- After 15 seconds have elapsed, power off your player and then power on your player

The above steps need to be performed fairly quickly (Although not VERY quickly)

DVD-511, DVD-611, DVD-709, DVD-711, DVD-809, DVD-811, DVD-909, DVD-MC20, DVD-M105, DVD-M108, DVD-M203, DVD-M204, DVD-M205, DVD-M405, DVD-HD937

Multi-Region Code 1:

- Always perform a Cold Start before applying the hack
- Power **On** your player whilst pressing hold both the **Play** and **Stop** buttons on the front player
- After a short while you should be presented with a set of language options. **Release** the Play and Stop buttons on the player
- You will now need to select a language option between **1** and **6**

Multi-Region Code 2:

- Press the **Repeat** button on the Remote Control
- Using the Remote enter the code below, note that you must know what Region your player is **currently** set to in order to know which code is appropriate
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on the Remote Control for Region free, or **1** for Region 1, **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on the Remote Control

Firmware Version 5.02E:

- Power on your player
- Press and hold both the **Play** and **Stop** buttons on the player itself
- After a short while you should be presented with a set of language options. **Release** the play and the stop buttons on the player
- You will now need to select a language option between **1** and **6**
- Press the **Repeat** button on your Remote Control
- Now using your Remote Control enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate, for **Region 2** use **5, 7, 5, 3, 8** instead of **3, 8, 7, 6, 7**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on your Remote for Region free, or press **1** button for Region 1, button **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on your Remote Control

Further information has emerged for the very latest players. The only drawback with the below is that it isn't held when the player is switched off. You also need an **Aiwa** remote control, our forum visitor used the **Aiwa RC-7AS08**:

- Turn on the player
- **Open** the DVD tray
- Press **Sleep** on the Aiwa Remote, and you will see a cold start message on screen
- Press **Clock 3 times very quickly**, pressing and pressing, you will see an adjust message on front of DVD player
- Put any Region of DVD in and it will play

It may also work with other **Samsung DVD-Mxxx** models, but may not work for machines with the 5.02E firmware loaded. Try the **Samsung V-5000** hack, it **MAY** work.

If the player sticks on FBI Warning screens:

- Press **Forward Search** x2 or faster, the disc should skip straight to the main feature

DVD-M103

Multi-Region:

- Turn **On** your DVD Player with the remote control
- Press the **Open/Close** button on your remote control (tray will **Open**)
- Press the **Open/Close** button on your remote control (tray will **Close**)
- Press the **Repeat** button on remote

- Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate
 - for Region 1 use **2, 9, 3, 3** and **4**
 - for Region 2 use **3, 8, 7, 6** and **7**
 - for Region 3 use **5, 6, 7, 3** and **2**
 - for Region 4 use **7, 6, 8, 8** and **4**
 - for Region 5 use **5, 3, 8, 1** and **4**
 - for Region 6 use **2, 4, 4, 6** and **2**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press **9** on remote for Region **free**, or **1** for Region **1**, **2** for Region **2** and so on
- Press **Open** on player
- Press **Standby** on remote

If the above code doesn't work then you may wish to try the codes above.

DVD-707, DVD-807, DVD-907

Multi-Region:

- Press the **DVD** button on your remote control.
- Press the **Open/Close** button on your remote control.
- Place a Region 1 disc in the tray.
- Press the **Open/Close** button on your remote control.
- Wait until the player ejects the disc, displaying an error message and leaving the tray open.
- Remove the Region 1 disc from the tray.
- Press the **Open/Close** button on your remote control.
- Wait until the display shows the words '**no disc**'.
- Press the buttons **Time Search**, **1**, **1**, and **9** on your remote control in order, one at a time.
- Press the **Open/Close** button on your remote control.
- Place a Region 1 disc in the tray.
- Press the **Open/Close** button on your remote control For newer firmware, or if the above method fails to work Repeat steps 1-8 as then before 9. Press the buttons **TV**, **2**, **0**, and **0** on your remote control in order, one at a time Repeat steps 10-12 as before.

Note: Earlier firmware versions will not play **The Matrix** or **There's Something About Mary** but can be upgraded, firmware update does not remove hack. This hack also removes Macrovision. This modification is only temporary on the **DVD-907** and will need reentering once the unit is powered off.

DVD-M101

Multi-Region:

- Insert a DVD from any Region.
- Press the **Play** and **FF** buttons together. The player should ask... "**ENTER DVD REGION**" :__
- Press "**0**" to make the player region free

This hack may also work on other **Samsung** players

DVD-S423, SV-DVD1E

Multi-Region Code 1:

- Always perform a Cold Start before applying the hack
- Power on your player whilst pressing hold both the **FF** and **Pause** buttons on the front player
- After a short while you should be presented with a set of language options. **Release** the Play and Stop buttons on the player
- You will now need to select a language option between 1 and 6

Multi-Region Code 2:

- Press the **TV View** button on the Remote Control until the Samsung DVD logo appears on the on-screen display
- Press the **Repeat** button on the Remote Control
*NB: If this hack does not work then repeat the whole process but use the **Subtitle** button on your remote control **instead** of Repeat*
- Using the Remote enter the code below, note that you **must** know what Region your player is currently set to in order to know which code is appropriate
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on the Remote Control for Region free, or **1** for Region 1, **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on the Remote Control

If the player sticks on FBI Warning screens:

- Press **Forward Search** x2 or faster, the disc should skip straight to the main feature

SV-DVD3E

Multi-Region:

- Always perform a **cold start** before applying the hack below
- Power **On** your player as normal
- Press and hold both the **Play** and **Forward** buttons on the player
- After a short while the words "No Disc" should appear from the onscreen display
- Release the **Play** and **Forward** buttons on the player
- Press the **Subtitle** and **Repeat** button on your remote control
- Using your remote control enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate:
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**
- A code should be displayed at the upper left of the screen showing the current Region setting of your unit
- Press the **9** on your remote control for Region free, or **1** for Region 1. Press **2** for Region 2, and so on
- Press the **Open** button on your player and play disc on tray
- Press the **Standby** button on your remote control
- Press **Standby** again, and wait until you see the **Samsung Digital** logo, press the **Play** button

SV-DVD40,SV-DVD50

Region Free:

- Power **On** player and ensure the tray is empty
- Using the remote press **Subtitle, 5, 7, 5, 3** and **8**
- The figure **2** should appear on your screen
- Press **9** on the remote
- Turn machine **Off** then **On**
- Please should now be region free

DVD-V5000

Multi-Region Code 1:

- Always perform a Cold Start before applying the hack
- Power on your player whilst pressing hold both the **Play** and **Stop** buttons on the front player
- After a short while you should be presented with a set of language options. **Release** the Play and Stop buttons on the player
- You will now need to select a language option between 1 and 6

Multi-Region Code 2: 2:

- Press the **Repeat** button on the Remote Control
- Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on the Remote Control for Region free, or **1** for Region 1, **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on the Remote Control

If the player sticks on FBI Warning screens:

- Press **Forward Search** x2 or faster, the disc should skip straight to the main feature

DVD-S225

Multi-Region:

- Press the **Repeat** button on your remote control NB: Do not confuse this with the Repeat A-B button
- Press the buttons **5, 7, 5, 3** and **8** on your remote control, in order one at a time
- The numbers **02** will be displayed on the top left of your onscreen display
- Press the **1** button on your remote control for region 1, **2** for region 2, and so on, or **9** for multi-region playback
- Press the **Open** button on your remote control
- After 15 seconds have elapsed, power off your player and then power on your player

DVD-E137B, DVD-237, DVD-HD40

Multi-Region:

- Power **On** with empty tray (No Disc will be displayed in the DVD control panel)
- Press the **Repeat** button on your remote control NB: Do **NOT** confuse this with the **Repeat A-B** button
- Press the buttons **5, 7, 5, 3** and **8** (2 will be displayed on the TV screen)

- Press the **9** for multi-region playback (9 will be displayed on the TV screen)
- Press the **Open** button
- **Close** the tray on the DVD player
- After **15** seconds have elapsed, power **Off** (switch the unit to stand-by mode) and then power **On**
- Finished and ready to play all regions

HTDL/M Home Theatre Systems

Multi-Region:

- Power **On** with empty tray (No Disc will be displayed in the DVD control panel)
- Press the **Enter** button on your remote control
- Press the buttons **8, 4, 2, 6, 9** and **Enter** button on your remote control
- Tray will **Open** automatically
- **Close** the tray on the DVD player
- After **15** seconds have elapsed, power **Off** your player (switch the unit to stand-by mode) and then power **On** your player
- Finished and ready to play all regions

V70,V85

Multi-Region:

- Power **On** with empty tray (No Disc will be displayed in the DVD control panel)
- Press **Subtitle** button on your remote control
- Press **5, 7, 5, 3** and **8** on your remote control (2 will be displayed on the TV screen)
- Press the **9** for multi-region playback (9 will be displayed on the TV screen)
- Press the **Open** button on your remote control
- **Close** the tray on the DVD player
- After 15 seconds have elapsed, power **Off** your player (switch the unit to stand-by mode) and then power **On** your player

Finished and ready to play all regions

Sampo

DVD-320, DVD-360, DVD-520, DVD-K535, DVD-K565, DVD-560 and DVD-620

Multi-Region:

To see what version of the firmware your player is using:

- Press the **Setup** button on your Remote Control
- Press the buttons **1, 2, 3** and **4** on the Remote
- You should now see the firmware version date

Converting this player to all region:

- Press the **Setup** button on your remote control.
- Using the onscreen menu, select the **Preferences** option.
- Press the **Still/Step** button on your remote control.
- Press the **Prev** button on your remote control.
- Press the **Next** button on your remote control.
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free. You can also disable Macrovision from this menu.

Please note the following if you have a very new **Sampo** DVD player, although note that this **MAY** or **MAY NOT** be relevant to the **DVD-620**:

"A quick guide on how to get round the recent removal of the hidden menus on the **Sampo DVD-320, DVD-360, DVD-520, DVD-560, DVD-K535** and **DVD-K565** models. First you will need access to a CD-R drive, secondly visit the <http://www.dvdschmiede.de/update.htm> where you can download the relevant CD images for both the new firmware and older which includes the menus.

After this its simply a case of burning yourself two CD-ROMs. Insert the older firmware CD and downgrade your system to the earlier version with the hidden menus, then configure the system to bypass region checking and optionally Macrovision. Finally insert the new firmware CD and upgrade to the latest.

Even though you will not be able to access the hidden menus, the settings you made from the earlier firmware will remain present. As for the bad news, this doesn't work on the new **Apex 600A** with the N4 EPROM and the 4318 Video Drive."

DVE-660

Multi-Region:

Checking the firmware revision:

- Press **Setup** then enter **1, 2, 3, 4, 5** on the Remote Control

To change Region:

- Press **Setup** then enter **3, 8, 8, 8, 3** on the Remote Control
- Enter the required region ID or **Bypass** (Will Play ALL Regions except some Region Code Enhanced Discs)

Setting CSS and Macrovision:

- Press **Setup** then enter **5, 9, 0, 4, 1, 9** on the Remote Control
- The **CSS** can be enabled or disabled
- The **MACROVISION** can be enabled or disabled

Adjusting PAL/NTSC Modes:

- Press **Setup** then enter **7, 2, 5, 5, 5** on the Remote Control

If the above modification fails to work then you may wish to try the modification for the **Sampo DVD-520** above

Sanyo

DVD-1550A, DVD-5100, DVD-6070, DVD-7201

Multi-Region:

- Press the **Program** button on your remote control
- Press **Right Cursor, Right Cursor, Enter and Play**

Schneider

DVD-511, DVD-811

Multi-Region:

- Press the **Menu** button on the Remote
- Press **1, 6** and **7**
- Press the **Mute** button

VCD Hack:

- Press the **Open** button on the Remote to open the drive tray
- Place an audio CD in the drive tray
- Press the **Open** button on the Remote to close the drive tray
- Press the **Menu** button
- Press the **1** button
- Press the **Index (1-All)** button
- Press the **Open** button
- Press the **1** button

DVD-810

Multi-Region:

- Press the **Menu** button on the Remote Control
- Press the **9** button on your Remote
- Press the **Open/Close** button on the Remote Control, note the draw will not open
- Press the **5** button
- You will now enter the region selection page, and can change the player to any Region

DVD-855

Multi-Region:

- Open CD drawer
- Press **Setup** on the Remote
- Choose the **right** item in the menu. This is the one that has settings "VFD, Password etc.)
- Press button **3, 3, 3, 3**
- In the secret menu now displayed choose the Region code 0 - 6 and confirm with the **Enter** button

DVD-857

Multi-Region:

- Press **Open/Close** on remote
- Press **Clear** on remote
- Press **1, 3, 6** and **9** on the remote
- Press **1** on remote, for region 1, **2**, for region 2, and so on, or **0** for multi-region playback
- Press **Open/Close** on your remote

HCS-500

Multi-Region:

- Open the players drawer
- Press **Volume Up** on your Remote
- Press **Fast Forward** on your Remote
- The on screen display will show **321** followed by the current Region code
- Press **Volume Up** on your Remote
- Press **Fast Forward** on your Remote
- Repeat steps 5 and 6 until the desired Region code is shown on the display
- Press and **hold** the **Angle** button on the Remote for approximately five seconds to select the Region

DVD-1003

Multi-Region:

- Press the **Open/Close** button on the remote
- Press the **Clear** button
- Press **1, 3, 6** and **9**
- Press **0** for region free or **1** for region 1, **2** for region 2 etc..

SEG

DVX-338

Multi-Region:

- Power **On**
- **Open** the shuttle door.
- Press **Setup, Setup, Arrow Up, Arrow Down** and **0** for codefree
- The TV should then display "R 0"

Sharp

DV-550

Note: Use this hack with care as you could lock up your machine!

Multi-Region:

- Press **Stop, Setup, Still/Step, 1, 2** and **3**
- You'll find a "LOOPHOLES" menu (the software politely reminds you that "**YOU SHOULDNT BE HERE**"). There is a Region menu and Macrovision menu plus others (CSS, AUTOMUTE, AUDIODITHER).

DV-620

Multi-Region Hack 1:

- Power on the player and press the **Setup** button on your remote
- Press **3, 8, 8, 8** and **3**
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free

Multi-Region Hack 2:

- Power on the player and press the **Setup** button on your remote
- Press **3, 7, 7, 7** and **4**
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free

Multi-Region Hack 3:

- Power on the player and press the **Setup** button on your remote
- Using the onscreen menu, select the Preferences option
- Press **Still/Step, Prev** and **Next**
- You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free. You can also disable Macrovision from this menu

Video output format between PAL and NTSC:

- Power on the player and press the **Setup** button on your remote
- Press **7, 2, 5, 5** and **5**
- You should now be able to change the output between PAL, NTSC and Auto

Disable Macrovision:

- Power on the player and press the **Setup** button on your remote
- Press **5, 9, 0, 4, 1** and **9**
- You will now enter the hidden setup page, and can turn Macrovision off and also disable CSS

Firmware Display 1:

- Power on the player and press the **Setup** button on your remote
- Press **1, 2, 3, 4** and **5**.
- You should now see the firmware version date

Firmware Display 2:

- Power on the player and press the **Setup** button on your remote
- Press **1, 2, 3** and **4** on your remote control
- You should now see the firmware version date

DV-740

Multi-Region - US/Canada DV-740U:

- Open up **Windows Notepad** or similar text editor, and type in, or copy and paste "**TSDVDREG-2001-9629735-R0**" (without the quotation marks, this code for Region free).
- Save the file as "**CREGIN.TXT**" (again, without the quotation marks)
- Burn this single file to a CD-R using ISO 9660 Mode 1 format (**not** Joliet).
- Insert the CD into the DV-740H - note this is not a firmware flash, merely accessing a factory setting.
- "R0" should appear in the bottom left of the screen - if it does not you may already have a multi-region player.

Multi-Region - Australia/New Zealand/Singapore DV-740X:

- Open up **Windows Notepad** or similar text editor, and type in, or copy and paste "**TSDVDREG-2001-8918448-R0**" (without the quotation marks, this code for Region free).
- Save the file as "**CREGIN.TXT**" (again, without the quotation marks)
- Burn this single file to a CD-R using ISO 9660 Mode 1 format (**not** Joliet).
- Insert the CD into the DV-740H - note this is not a firmware flash, merely accessing a factory setting.
- "R0" should appear in the bottom left of the screen - if it does not you may already have a multi-region player.

Multi-Region - UK/Europe DV-740H/DV-740S:

- Open up **Windows Notepad** or similar text editor, and type in, or copy and paste "**TSDVDREG-2001-8939912-R0**" (without the quotation marks, this code for Region free).
- Save the file as "**CREGIN.TXT**" (again, without the quotation marks)
- Burn this single file to a CD-R using ISO 9660 Mode 1 format (**not** Joliet).
- Insert the CD into the DV-740H - note this is not a firmware flash, merely accessing a factory setting.
- "R0" should appear in the bottom left of the screen - if it does not you may already have a multi-region player.

DVS-15H

Multi-Region

- Power the player **On** and **Open** the tray
- Using the remote press **3, 3, 0, 8, 8** and **0**
- **Close** the tray and power the player **Off**

Sherwood

DVD-V756

Multi-Region:

- Turn **On** the player
- Ensure that the display shows "**No Disc**"
- Press **Stop Forward Skip** and **Backward Skip** on the players front panel
- Press **Play** on the players front panel
- Now on the Remote Control Press "**0**"
- **Open** the players tray
- Insert the DVD you wish to play
- **Close** the draw
- You should get a message appear on the TV screen
- To complete the process, press **Open/Close**

DVD-1000K

Multi-Region:

- **Open** disc tray
- Press numbers **8, 8, 8, 8** on remote controller
- **System Menu** will be displayed on OSD
- Press **Enter** on remote to select region menu
- Use **Up/Down** keys to select region **0**, then press **Enter**
- Use **Up/Down** keys to select **Exit Menu**, then press **Enter**
- **Close** disc tray

DVD-4106R

Multi-Region:

- Press the **Pause** button on your Remote Control
- Using your Remote Control enter the code **3, 1, 4, 1, 5** and **9**
- Press the **0** button on your Remote for Region free, **1** for Region 1 or **2** for Region 2
- Press the **Pause** button on your remote control
- Power off your player and wait a few seconds
- Power on your player

Firmware Display:

- Press the **Setup** button on the Remote Control
- Select **TV Aspect** and place the cursor on the **16:9 Wide** option
- Using the Remote Control enter the code **1, 3, 9, 7, 1, 3** and **9**
- Press the **Enter** button
- You should now see the version information screen
- Pressing **Setup** button on the Remote Control to exit this info screen

DVD-6105K

Multi-Region:

- **Open** disc tray
- Press numbers **9, 7, 3, 5** on remote controller
- **System Menu** will be displayed on OSD
- Press **Enter** on remote to select region menu
- Use **Up/Down** keys to select region **0**, then press **Enter**
- Use **Up/Down** keys to select **Exit Menu**, then press **Enter**
- **Close** disc tray

SM Supervision

SM 1000, SM 1100

Multi-Region:

- Ensure no disc is in the player
- On the remote press **Set-up, Step, Previous** and **Next**
- Enter the displayed service menu
- You can view or set the required region (select **Bypass** for all regions),
Css auto/off and Macrovision.

SM 2000

Multi-Region:

- Make sure you have no disc in the player
- Press **7, 7** and **Enter**
- Enter the displayed service menu
- You can now view and change the region ID (set Bypass for all regions),
Css auto/off and Macrovision.

SM 2100

Multi-Region:

- **Open** tray and press **Set-up, Next, Stop, Pause/Step, Previous** and **Next**
- This brings up a service menu where you can select the required region or set it to **Bypass** for region free

SM 2200

Multi-Region:

- Press, **Set-up, Vol-, Vol+, Vol-** and **Vol+**
- Display now shows "Vol#" (where # is the current region)
- Change to "Vol255" with < > or ^ V for Codefree

SM 2400, SM 2500

Multi-Region:

- **Open** the tray
- Type **9, 9, 9** and **9** on the remote

- Press the **OK** key until the region code you want appears (9 is code free)
- **Close** the tray

Sony

Please note:- People have been reporting that these Sony hacks don't work. These instructions come from a sheet supplied by vendors that sell pre-chipped players. They then add these extra features to the firmware. A plain unmodified player will **not** respond to these button press combinations.

For more information try Norway based company www.tronika.co.no. If you go to the Sony DVD player section you can either buy a pre-modded player or DIY kit. The only way to make your player multi-region is to either modify the player yourself (not recommended if you are not handy with a soldering iron) or get your hands on a Sony DVD service remote which you may be able to rent for about £40.

NS355

This hack requires a **One For All 7040** remote

Using the One For All 7040 remote

- Select **DVD** device on remote
- Hold **Magic** button until DVD button flashes twice
- Press **0, 5, 3** and **3**

Set Up Device DVD Player

- Put a disc in player and put player onto welcome screen
- Hold **Magic** button down until DVD button on remote flashes twice
- Press **9, 9** and **4**
- Press **Magic** button
- Press **1, 8, 9** and **1**
- Repeat steps **2** to **4**, then press **2, 5, 5** and **2**
- Repeat steps **2** to **4**, then press **0, 9, 5** and **3**
- Repeat steps **2** to **4**, then press **2, 2, 1** and **4**
- Repeat steps **2** to **4**, then press **0, 7, 9** and **5**
- Remove disc from the player, then put player on stand by
- Press **1, 2, 3, 4** and **5** (success will be displayed and comes out of stand by)
- Press **1, 2, 3, 4** and **5** (player goes into stand by and your player is now region free)

DAV-S300

Multi-Region:

- Put the player into **Standby** mode

- Press **1** and **Return** on remote for region 1, **2** and **Return** for region 2, and so on. Use **0** and **Return** to return player to default region settings
- Press **P-Mode** and **Return** to play DVD's with the selected region, auto-switching is **Off**
- Press **Audio** and **Return** for auto-switching **On**
- Press **Angle** and **Return** for MacroVision **On**
- Press **Subtitle** and **Return** for MacroVision **Off**

DVP-M35

Multi-Region:

- Insert required disc and press the **Menu** button
- Select **Program** button then select a few chapters
- Press **Play, Stop, Play** until the film starts
- This may take some time to work and the film may start playing somewhere in the middle, but once it starts playing you can skip back to the beginning of the film

DVP-C660, DVP-C670D

Multi-Region:

- Switch player to **Standby**
- Using remote press **5, 5, 5** followed by **Menu**
- Hold down **3** for 3 seconds

If the above fails to work then you may wish to try:

- Switch player to **Standby**
- Press **Title, Clear, Power**
- Press the required region number

DVP-CX860

Multi-Region:

- **Open** the drive tray
- Enter **9, 8, 1, 7** on remote to access the system menu
- Select region from **1** to **6** or set it to **9** for Multi-region. Macrovision can be disabled from this screen

DVP-NS300, DVP-NS305, DVP-NS400D, DVP-NS700, DVP-S330, DVP-S335, DVP-S360, DVP-S336, DVP-S525D, DVP-S530D, DVP-S535D, DVP-S536D, DVP-S725D, DVP-S735D

Multi-Region:

- Turn **On** the unit with the remote controller
- Wait until "no disc" appears in the unit's display
- Press **Pause, 3, 1, 4, 1, 5, 9**

- The word "**CODE**" should appear in the display
- Within five seconds, press the key that corresponds to the zone you want i.e. **0** for region free, **1** for region 1, **2** for region 2 and so on
- Again, within 5 seconds, press **Pause** and **Power**

If the above fails to work then you may wish to try the following:

- Put the player into **Standby** mode
- Press **1** and **Return** on remote for region 1, **2** and **Return** for region 2, and so on. Use **0** and **Return** to return player to default region settings
- Press **P-Mode** and **Return** to play DVD's with the selected region, auto-switching is **Off**
- Press **Audio** and **Return** for auto-switching **On**
- Press **Angle** and **Return** for MacroVision **On**
- Press **Subtitle** and **Return** for MacroVision **Off**

DVP-S725D

Multi-Region:

- Press and hold **Clear**, **Menu** and **4**
- A menu will be displayed allowing you to set the region

If this fails to work then you may wish to try one of the codes listed above

PS-2

Multi-Region:

- Press **O** x 2 times
- Press **R1** x 5 times
- Press **X** x 7 times

AVD-LS10

Multi-Region:

- Download this file: www.home.no/trsolhei/avd-ls10.zip
- Power **On** the player and the TV
- Insert the disc and wait a few seconds
- TV shows the service menu
- Press **0** on the remote to set the region
- The disc will spin for some seconds. Then the tray will open automatically and TV will show conformation message on OSD
- Take out the disc and power **Off** into standby mode. Tray will close automatically and the power will go off
- Power **On** again

- Standby LED will flash for some seconds and power will go off again.
- Power **On** again
- Insert the disc and verify that the service menu shows the correct region
- Take out the service disc.

Sunstech

DVP-T303

Multi-Region (in English):

- Using the remote **Open** drive tray
- Press **Setup** and highlight **Custom**
- Press **3, 3, 3, 3** and **Press Enter** in the secret menu
- Select Free
- Press **Setup**

Multi-Region (in Spanish):

- Usando el mando a distancia abrir (**open**) la bandeja
- Pulsar **Setup** y seleccionar la opción **Varios**
- Pulsar **3, 3, 3, 3** y se abrirá un menú secreto
- Pulsar **Enter** para seleccionar la región
- Seleccionar Free y pulsar **Enter**
- Pulsar **Setup**

DVP-X505

Multi-Region:

- Using the remote **Open** drive tray
- Press **Clear** button on remote
- Press **1, 3, 6 and 9** on remote followed by region code (**0**=all regions, **1**=Region 1, **2**=Region 2 etc), i.e. for all regions press **1, 3, 6, 9 and 0**
- **Close** drive tray

Tatung

TDV-2000

Multi-Region:

- Power the player on. Open disc drawer
- Type in **0, 3, 9, 1** on handset then press **Enter**
- Scroll to select country
- Enter **9, 2, 1, 0** and press **Enter**
- Press **Setup**

TDV-5100

Multi-Region:

- **Open** the players tray
- Press **Setup, Stop, Rew Skip** and **FF Skip**

Teac

DV-2000, DV-2150, DV-3000

Multi-Region:

- **Open** the players tray
- Enter **2, 1, 6, 8** using the Remote Control, followed by **OK**
- Enter the region code e.g. **1** for Region 1, **2** for Region 2 etc. enter **9** for Region free (Use the **Enter** key to cycle through the Regions)
- If the above region selection code doesn't work then try **0** for region free

PL-D1000

Multi-Region:

- **Open** the disc tray
- Press **3, 8, 3** and **8** on the remote
- A service menu will appear
- Select the required region, i.e. **1** for 1, **2** for 2 and so on. Use **9** for region free
- Macrovision can also be disabled from the menu
- **Close** the disc tray

PL-D1200

Multi-Region:

- Power on the player and **Open** the tray
- Enter **8, 1, 3, 2, 8**
- Enter the region code e.g. **1** for Region 1, **2** for Region 2 etc. enter **0** for Region free (Use the **Enter** key to cycle through the Regions)
- **Close** the tray

PL-D2000

Multi-Region:

- Ensure TV monitor is **On** and set to display DVD
- Turn system completely **Off**
- Turn **On** system and **Open** tray
- Using remote press and hold the **Return** button

- Whilst holding the **Return** button, press and hold the **Display** button
- You will see something similar to **VER 1006 TE 3210** on the screen
- Release **Display** and **Return** buttons simultaneously
- Press the **Angle** button
- You will see **WRITING REGION ID** displayed
- Player should now be region free

DV-2170

Multi-Region:

- Empty the Disc Drawer
- Press **Setup** on the remote
- Press **1, 3, 6, 9, Left, Left, Left, Right** (keypad)
- Use **Up** and **Down** to change region. Set to **0** for region free
- Exit **Setup**

DV-2180

Multi-Region:

- Empty the Disc Drawer
- Press **Setup** on the remote
- Press **1, 3, 6, 9, Left, Left, Left, Right** (keypad)
- "Version" will appear on the **Menu**, scroll down to this
- Once in "Version" go to **Region** and go across to the number and change to **0** for Multi-Region. Use the keypad to change the zones
- Then exit **Version** and **Setup**

DV-H550

Multi-Region:

- Turn **On** power and using the remote **Open** the tray
- Push **Clear, 2, 5, 8, 0** and **Clear** keys in order
- Unit enters into test mode. "**TESTMODE**" is displayed on FL Display and some numbers are displayed on TV screen
- Under most line on the TV screen, some numeric are displayed as "**08 - XX XX XX XX AA BB CC**" Region **0**. Should be set so that **AA = 23, BB = 23, and CC = 00**
- If the settings (**AA = 25, BB = 23, CC = 02**) are correct, Push **Return** key **twice**. Tray is Closed and unit exits from Test mode

If the above settings are incorrect, correct the setting as follows:

- Push **Up** or **Down** so that "**12 XX**" is Displayed on FL display
- Press **2** and **3** in order so that "**12 23**" is displayed on FL Display

- Press **Select** key of remote control unit
- Push **Up** or **Down** so that "**13 XX**" is displayed on FL display
- Press **2** and **3** key in order so that "**13 23**" is displayed on FL Display
- Press **Select** key of remote control unit
- Push **Up** or **Down** so that "**14 XX**" is displayed on FL display
- Press **0** and **0** keys so that "**14 00**" is displayed on FL Display
- Press **Select** key of remote control unit
- Confirm "**08 - XX XX XX XX 23 23 00**" is displayed at under most line on the TV screen
- Push **Return** key **twice**. Tray is closed and unit exits from Test mode.

Technika

DVD-108

Multi-Region:

- Press the **Open** button on the front of the player
- Press the **Setup** button on your remote control
- Using the **Left** button on your remote control, change the display to the **Preference Page**
- Press the **Down** button on your remote control to highlight the **Set TV Standard** option
- Using your remote control, press the buttons **4, 9, 5, 4** and **0**, in order, one at a time NB: You may need to perform this step quicker if this doesn't work as expected
- The onscreen display will display the currently selected region
- Using the **Up** and **Down** buttons on your remote control, change the region to **1** for region 1, **2** for region 2, and so on, or **0** for multi-region playback
- Press the **Setup** button on your remote control
- Power **Off** your player
- Power **On** your player

DVD-230

Multi-Region:

- Make sure the tray is empty
- Power **Off** and then **On** again
- It will now say **NO DISC** in the top left
- Using the remote press the **Right** key **3** times
- You are now at the **Preference Page**
- Select the Box at the top of the screen with the Red Tick (this is to the left of the Yellow Padlock. Do **Not** Select the Yellow Padlock)
- Now type in the code **4, 9, 5, 4** and **0**
- It will now show 2 as the region
- Using the **Down** arrow move it to show **0**
- Now press **Play** and then power **Off**

DVD-300

Multi-Region:

- **Open** the players tray and leave it open
- Enter the **Setup** Menu
- Select **Custom** (the last option on the Setup Menu)
- Key in **3, 3, 3, 3** (4 numbers)
- Select your code choice (Press **FREE** for Multi-Region)
- Press **Enter** then **Setup**

DP-301

Multi-Region:

- Make sure drawer is empty
- Press **Setup**
- Press **Right** until you on in the box with the red tick on it and press **Play**
- Enter the code **4, 9, 5, 4** and **0**
- It should show as region 2
- Using the arrows chose desired region (**0** is multi region)
- Press **Play** then power **Off**

Telefunken

TDV-0811

Multi-Region:

- Press **Menu** on remote handset
- Press **3, 0, 0** and **6**
- Press **0** (zero) for free zone
- **Close** tray
- **Set OK** should be displayed

TDV-8301

Multi-Region:

- **Open** door
- Using remote key in **3, 3, 0, 8** then **0** for the zoning
- **Close** door

Tevion

DVD-200, DVD-2001

Multi-Region:

- Press the **Menu** button on the Remote
- Press **1, 6, 7** and **Mute**
- To select a specific Region press a number between **1** and **6** instead of Mute

VCD Playback

- Press the **Open** button on the Remote to open the drive tray
- Place an audio CD in the drive tray
- Press **Open** button on the Remote to close the drive tray
- Press **Menu, 1, Index (1-All), Open** and **1** button

Thomson

24WT25UG, 28WT25US

Multi-Region:

- **Open** the disc tray
- Insert any DVD but **do not** close the disc tray
- On the front panel, press and hold the **Eject, Forward Search** and **OK** buttons. Note that this may take several attempts to achieve correctly
- The onscreen display will refresh twice and the disc tray will close
- Release the **Eject, Forward Search** and **OK** buttons on the front panel

Restore Default Region:

- Repeat the above

DTH-195E, DTH-212, DTH-213, DTH-231

Multi-Region Hack:

- Turn **On** the player without a disc inside
- Wait for the menu
- Using the remote enter the following code: **1, 6, 7, 1** and **9**
- Chose region (**0** for all regions)
- Turn the player **Off**

DTH-2100, DTH-2200, DTH-4600, DTH-4601

Multi-Region Hack 1:

- Turn player **On** ensuring no disc is in the player
- Press **1, 6, 7** and **0** on the remote control
- Press **Stand by**

Multi-Region Hack 2:

- Turn player **On** ensuring no disc is in the player
- Press **1, 6, 7** on the remote control
- Wait a few seconds until a service menu appears
- Press **1** for region 1, **2** for region 2 or **0** for region free
- The player will now show **All**
- Press the **OK** button

DTH-3300, DTH-3600, DTH-3700, DTH-4000, DTH-4500, DTH-5000, DTH-5200

Multi-Region Hack 1:

- Always perform a Cold Start before applying the hack
- Power **On** player whilst pressing hold both the **Play** and **Stop** buttons on the front player
- After a short while you should be presented with a set of language options. **Release** the **Play** and **Stop** buttons on the player
- You will now need to select a language option between **1** and **6**

Multi-Region Hack 2:

- Press the **Repeat** button on the Remote Control
- Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate
 - for **Region 1** use **2, 9, 3, 3** and **4**
 - for **Region 2** use **3, 8, 7, 6** and **7**
 - for **Region 3** use **5, 6, 7, 3** and **2**
 - for **Region 4** use **7, 6, 8, 8** and **4**
 - for **Region 5** use **5, 3, 8, 1** and **4**
 - for **Region 6** use **2, 4, 4, 6** and **2**
- A code should be displayed on the screen indicating the current Region setting of your unit
- Press the **9** button on the Remote Control for Region free, or **1** for Region 1, **2** for Region 2 and so on
- Press the **Open** button on your player
- Press the **Standby** button on the Remote Control

FBI Warning Bypass:

- Press **Forward Search** x2 or faster, the disc should skip straight to the main feature

DTH-4200

Multi-Region:

- Power **On**
- DVD displays "hello" then "no disc"
- Immediately press **8, 8, 8, 8** then **0**
- Follow by **Ok** button on the remote
- Display will show **Code 00**
- Play a code **1** disc to confirm
- When main power is **Off**, setting goes back to default code 3 (S.E. Asia)

DTH-6000

Multi-Region:

- Power **On** the device
- **Open** the tray
- Keeping **Eject** (for VHS) pressed, press **Rewind**, **Forward** "FFD" (for DVD) for 3-5 seconds

DTH-210, DTH-210E

Multi-Region:

- Turn player **On** ensuring no disc is in the player
- Press **1, 6, 7** and **1** for region 1, **2** for region 2, or **0** for region free, and so on
- Press **Stand by**

DTH-211U, DTH-311

Multi-Region:

- Power **On**
- Press **3, 2, 1, 7, 8, 9, 4, 5** and **6** on the remote
- A screen then appears with the regions. Press **1** for region 1, **2** region 2 etc, or **ALL** for multi region

It has been reported that the screen jumps a little when multi-region selected so may be advisable to just select the region DVD you are watching at the time as it disappeared when reverted back to the stated region on the disk.

DPL-900DV, DPL-910VD

Multi-Region:

- Switch on the player in **DVD/CD** mode without disc in the player
- Wait for "**no disk**" to appear on the screen
- Using the remote enter **2, 6, 8, 6, 2, 2, 0, 0** and the region (**1, 2** and so on) or **0** for region free
- The display show now indicate "**Reading**"
- Insert DVD and start playing

DPL-909VD

Multi-Region:

- Ensure in **DVD** mode with **No** disc inserted (NO DISC on the display)
- Hold down the **Select** button on the fascia for about **5** seconds.
- "**REGION 2**" will be displayed (for a region 2 locked device).
- Use volume **+** or **-** on the fascia to select the desired region (**0** for region-free)

Tiny

TPSL-102

Multi-Region:

- Switch on unit and ensure no disc is in the machine
- Key in on the Remote **1, 0, +10, Prev** and then **Next**. You will then see the current Region number
- Now press **Prev** or **Next** to change the Region

Beware, this machine will now **not** playback RCE encoded discs.

Toshiba

SD-1200, SD-2109, SD-1600, SD-1700, SD-210E, SD-2150, SD-220E, SD-2800, SD-3750

Multi-Region:

- Put DVD into player - wait for regional code violation screen to appear
- Once this has occurred press the **M** (Memory) button on your remote
- Press **1** for Title 1 and **Play** on the remote - this will over-ride the regional code violation detection menu
- You can watch the movie by pressing **Fwd** on remote and change chapters by using the **T** (Title/Chapter) button on the remote)

SD-43HK

Multi-Region:

- Switch **On** DVD player without disc in machine
- Press **Enter**
- Press **8, 4, 2, 6** and **9**
- Press **Enter**
- Player should turn itself **Off**. If not switch it **Off**
- Switch player back **On**

SD-3109

Multi-Region:

- Insert a region 1 DVD
- Press **Stop** before the warning map appears
- Press the **T** button twice to bring up the time input option
- Enter a time of **one** second
- Press **Play**

United

DVD-1151

Multi-Region:

- Power the player **On**
- Press and hold **Stop** and then **Open/Close** and **Skip Fwd** on the player fascia for three seconds
- A hidden menu will then appear on the TV
- Select **Regional Number** and press **Select** on remote
- Select **Free**, or required region, and press **Select** on the remote

DVD-1155

Multi-Region:

- Power **On** the player
- **Open** the tray and enter **8, 9, 2** and **6**
- You'll see ******** on the top left of the screen
- Enter region code of your choice of **1-6** or **9** for all regions
- Press **Play**

DVD-2151

Multi-Region:

- Make sure you don't have any DVD inserted and tray is **Closed**
- With the remote control press **Setup**, **Next**, **Stop**, **Pause/Step**, **Previous** and **Next**

DVD-2255, DVD-3151

Multi-Region:

- **Open** tray and press **3, 3, 0** and **8**
- You'll see **** on the top left of the screen
- Enter region code of your choice of **0-6** where **0** is all regions
- Press **Play**

DVD-3160,DVD-3161

Multi-Region:

- Turn the machine **On** and **Open** up the DVD tray
- Using the remote control press **9, 8, 1** and **7** or **3, 8, 3** and **8**
- A service menu will appear
- Change the region to whatever you want or set it to **9** for all
- Press the **Ent** button until it matches your choice
- You can also alter **Macrovision** from this menu

Veba

AV2402

Multi-Region Hack

- This player should be region free out of the box

AV2403, AVPMK560

Multi-Region Hack

- **Eject** any discs and make sure that the loader is empty
- Press **Title**
- Press **0, 1, 6** and **7**
- Press **1** for region 1, **2** for region 2 etc, or **0** for all regions
- It should then show 'Set OK', if not then repeat the procedure.

Venturer

STS20AAS-10,STS21AAS- 10,STS75E,PVS123,PVS166W,PSV1760,PSV177W

Multi-Region:

- **Open** the tray
- Press **8, 1, 3, 2** and **8**
- The region menu will appear, then press enter until region **9** is selected and press **Play**
- The unit will now be multi region

VCD Playback:

- **Open** the tray
- Press **0, 0, 0, 0** and **1**

PSV17700

Multi-Region:

- Pop the tray up
- Using remote control press **8, 1, 3, 2** and **8**
- The region menu will appear, then press **Enter** until region **9** is selected and press **Play**
- The unit will now be multi region

Welltech

20654,40954,HTDVD02

Multi-Region:

- **Open** Lid
- Press **Title** then **0, 1, 6, 7** and **0**
- The words "**Set ok**" appear
- The player is now region free

Wharfedale

WMTS-6801-2.1

Multi-Region:

- **Open** drawer
- Press: **8, 1, 3, 2** and **8**
- Display shows: **Region Code 2**
- Press **Enter** key **5** times until code is changed to **9**
- Press **Play** (or **Setup** to save & quit)
- Player is now multi region

DVD-750

Multi-Region:

- **Open** the DVD players tray
- Place a Region 1 disc in the tray, but don't close it

- Press the buttons **0**, **1**, **2** and then **3** on your remote control in order, one at a time
- Press the **Play** button on either your remote or the player

Restore to Region 2:

- Open the DVD players tray
- Place a Region 2 disc in the tray, but don't close it
- Press the buttons **Return** and then **Play** on your remote control in order, one at a time

Note: This machine has problems playing the following Region 2 discs: **Jaws**, **LA Confidential**, **Ten Things I Hate About You** and **Leon**. However there is a firmware update for the machine to deal with the issues, so see your local electrical retailer.

DVD-750S

Multi-Region for Older Players:

- Press **Open/Close** button on your remote control
- Press **Zoom, A-B, Up, Left, Down** and **Right**
- The words **Region Free** should briefly appear on screen confirming that your player is now region free

To Change to a Specific Region:

- Press the **Open/Close** button on the Remote Control to open the drive tray
- Key in the numbers **1, 1, 1** and then **1** on Remote Control, in order, one at a time
- Press the button **1** on the Remote Control to select Region 1, or **2** to select Region 2, etc.
- The word **Region** and then the number you selected should briefly appear on screen to confirm that the hack has been successful

Restore to Region 2:

- Press **Open/Close** button on your remote control
- Press **Zoom, Up, Left, Down** and **Right**
- The words **Region Free** should briefly appear on screen confirming that your player is now region free

Multi-Region for Newer Players:

- Press the **Open/Close** button on your Remote Control
- Press **Step, Previous** and **Next**

- The words **Region Free** should briefly appear on screen confirming that your player is now region free

To Change to a Specific Region:

- Press the **Open/Close** button on the Remote Control to open the drive tray
- Press the buttons **0, 7, 5** and then **0** on the Remote, in order, one at a time
- Press the button **1** on the Remote Control to select Region 1, or **2** to select Region 2, etc.
- The word **Region** and then the number you selected should briefly appear on screen to confirm that the hack has been successful

Restore to Region 2:

- Press the **Open/Close** button on the Remote to open the drive tray
- Press **Slow, Previous** and **Next**
- The drive tray should close the player should now return to its factory default settings

Note: This machine has problems playing the following Region 2 discs: **Jaws, LA Confidential, Ten Things I Hate About You** and **Leon**. However there is a firmware update for the machine to deal with the issues, so see your local electrical retailer.

DVD-M3

Multi-Region Code 1:

- Press **Open** button to eject the tray
- Press **Setup** to enter main menu
- Press **4, 9, 5, 4** and **0**
- The OSD will now indicate a **Version** menu
- Select **Version** menu and change region code using **Up** and **Down** keys
- Exit setup and **Close** the tray

Multi-Region Code 2:

- Switch **On** unit and select **Set-up**
- On the general page press **8, 8, 8** and **8**
- The version menu will appear
- Select the **Region** menu and set to **0** - This menu will also allow the selection of **HDCD, VCD** and **WMA** formats
- Press **Play** and exit the set-up menu

DVD-M5

Multi-Region:

- Press **Setup** to go into the setup menu
- Type **6, 2, 8, 3** and **6**
- Press **Enter, All** and **Enter**
- Now press **Setup** to exit from the menu

DVD-50ST

Multi-Region:

- **Open** drawer
- With drawer Open enter **8, 1, 3, 2** and **8**
- A display will come up on the screen enter **9** and **Close** door

Xenius

DVD-X1030

Multi-Region Hack

- Switch **On** player with an empty tray
- Press **Menu** and then the numbers **1, 6** and **7**
- A little black menu screen will appear giving you selections of 1-6 for each 6 regions, for multi-region just press the number **0**

HTX-2200

Multi-Region Hack

- Turn **On** the Player from the Power Button, **not** the Remote
- In DVD Mode **Eject** the Tray
- Using the remote control press **8, 1, 3, 2** and **8**
- Press **Enter** to cycle through Regions **1** to **6** or **9** is Region free
- Press the **Return** key (next to the Power key) to close out the command

XMS

XMS-750

Multi-Region:

- **Open** draw
- On front keys press **3, 3, 0, 8** and **0**
- **Close** draw

XMS-888

Multi-Region:

- Press **Setup** the **Stop** on the remote
- Press **Prev** (|<<) and **Next** (>>|) on the remote (menu will display)
- Select region ID and press **Enter**
- Select **0** on remote to multi zone
- Press **Enter**
- Press **Setup** button to quit

Yamada

DVD-2500

Multi-Region Hack

- Press **Eject** button on the remote control to open/eject the disc tray
- Press numbers **2, 8, 1** and **2** on the remote control, the factory default region code will be displayed on the TV screen.
- Press **Play** button to select the region (please note that we defined digit **9** instead **0** for region free) code
- Press **Setup** button to exit settings

DVD-5520

Multi-Region Hack

A number of visitors have claimed that their **Yamaha DVD-5520** player is not multi-region out of the box as it should be. However, if this is a problem there is a firmware fix available.

- Download the firmware update from [here](#) (if it is not available here then please let us know)
- Extract the file to your hard drive and burn the **11121213.BIN** to the root directory of a CD. Use Standard ISO9660 Format and finalize the CD. Don't use Joliet, multi-session or XA Format!
- The CD title **must** be **P80J0001**. Don't copy both firmware versions on one CD. You have to use separate CDs.

- Insert the ready CD into the DVD-Player and press **Play** when prompted.
- When the CD drive opens take out the CD and wait about 1-2 minutes.
- The DVD player will be reset automatically

Yamaha

DVD-S510, DVD-S520

Multi-Region Hack 1:

This hack should work on all Philips DVD players as of **06/01/2001** with any firmware version, and other similar models by manufacturers such as **Grundig, Marantz** and **Philips**.

- Send the infra-red code **RC6** (aka **Codeset 4, Key 235**) to your player. You can do this with a OneForAll remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions:
 - Configure the Remote using the setup code **0539**
 - Press the **Magic** button
 - Enter the code **085**

If you own a Palm Pilot, you may also use Pacific Neo-Tek's OmniRemote software to generate the **RC6** code using a downloadable .pdb file.

- Download the .pdb file into your Palm Pilot
- Press the OmniRemote key marked as 955 Multizone
- The onscreen display should show **11** spaces like this: '-----'
- Using the number keys on your DVD player's Remote Control, enter the code **222 222 005 255**. Note that this is 12 digits and the last digit will not show on the on-screen display
- Press the **Play** button on the DVD player's Remote
- The onscreen display should now show the words **No Disc**
- Power off your DVD player, wait **10** seconds and then power back on

Multi-Region Hack 2:

You may also use the following methods for players with firmware 6.2:

- Turn your DVD player **On**
- The display will show you **no disc**
- Press **Play** and then press **1, 5, 9** on the DVD Remote
- On DVD display will appear -----
- Key in **101 040 000 140** on the Remote when you press the last digit you will see a little point
- Press **Play**

- The player will be turned off
- Your DVD is ready

DVD-S540

Multi-Region Hack:

- Press the **Open** button on your DVD-player to **Open** the drive tray
- Using the remote press **9, 9, 9** and **9** on your remote control
- Press the **1** button on your remote control for region **1**, **2** for region **2**, and so on, or **0** for multi-region
- Press **OK** and the tray will close
- Reset the unit by powering **Off** and then back **On** again

Yukai

DVD-V300

Multi-Region:

- Turn **On** the player with no disc in the drive
- Using the remote press **Set-up**
- On the front panel press **Next**, **Stop**, **Pause/Step**, **Previous** and **Next**

DVD-V520

Multi-Region:

- Turn **On** the player with no disc in the drive and press **Set-up**
- Using the volume buttons on the remote press **Plus**, **Minus**, **Plus** and **Minus**
- At the top of the TV screen **Ver 2** will be displayed, indicating that the player is currently set as **Region 2**
- Using the **Left** and **Right** keys change the region code from **1** to **6** or **255** for region free
- Press **Set-up** to Finish

DVD-V520IV

Multi-Region Hack 1:

- Ensure the players tray is empty and closed

- On the **Remote** press **Setup**
- Using the **Front Panel** press **Next, Stop, Pause/Step, Prev** and **Next**
- You should now see a new menu
- Go to **Select Region** and make your choice

Multi-Region Hack 2:

- Press **Setup**
- Press the **volume +** and **-** keys alternating until you see "**VER #**" (# is your current Region code)
- Use the Cursor keys to choose **VER 255** (Region free)
- Press **Setup**

Multi-Region Hack 3:

- Press **Setup**
- Press **Next, Prev, Next** and **Prev**
- Then you will find the menu. It says '**ver x**'. **x** is you Region code. Press **PREV** until **x=255** for Region free mode
- Press **Setup**

Multi-Region Hack 4:

- Empty Tray
- On the remote press **Setup, Next, Prev, Next** and **Prev**
- On Right Upper Corner will be written **Ver#**
- Press **Left** or **Right** to get to number 255 (which is for region free - these version numbers correspond to region number)
- Turn **Off** and **On**

DVD-560

Multi-Region:

- Power up DVD without a disc in the player
- Press **Set-Up** on the remote
- On the player press **Next, Previous, Next** and **Previous**
- Region code should be displayed on top right corner of screen
- Use **Left** and **Right** keys to change region code to **255**

Zenith

DVC-2200, DVC-2201, DVC-2381, DVC-2550, DVC-5201

Multi-Region:

- Power **On** the player with no disk in the drive
- Press **Pause** on the Remote

- Enter **3, 1, 4, 1, 5, 9** on the Remote (the word **COdE** appears on the display)
- Enter **0** on the Remote (**0** = All Regions, **1** = Region 1, **2** = Region 2, etc.)
- Press **Pause** on the Remote
- Power the player off and then back **On**

VCD Hack:

- Power on the player with no disk in the drive
- Press **Pause** on the Remote
- Enter **1, 4, 7, 2** on the Remote (the characters **01 47** should appear on the display, if your player is a non UK model, this number will probably be different)
- Press the **Up** arrow **Three** times (the characters **04 Fd** should appear on the display)
- Press **Program, 6, Program, 5** (the characters **04 FE** should now be displayed)
- Press **Enter** (the display should flash briefly)
- Press **Return**
- Power the player off and then back on
- Play a VCD

DVC-2350

VCD Hack:

- Power on the player with no disk in the drive
- Press **Pause** on the remote
- Enter **1, 4, 7, 2** on the remote
- Press the **Up** arrow three times
- Press **Program, 5, Program, 5** (the characters **04 EE** should now be displayed)
- Press **Enter** (the display should flash briefly)
- Press **Return**
- Power the player off and then back **On**
- Play a VCD